



User Manual

Wired Headphones - CT3016



Tel: (RSA) 010 140 4900 / Email: sales@parrot.co.za / www.parrot.co.za

Specifications



Please follow all instructions of this user guide to ensure proper use.

Specifications	Parrot Wireless Headphone
Bluetooth Version	Bluetooth 5.2
Speaker	40mm
Wireless Range	>=12m
Transmission Frequency	2402MHz - 2480MHz
Charging Voltage	5V
Power Voltage	3.0 - 4.2V
Standby Current	30 - 40 μ A
Charging Current	180mA
BT Music Current	17 - 20mA
BT Call Working Current	19 - 22mA
BT Music Play Time	Up to 72 hours
Talk Time	Up to 70 hours
Battery in Headphones	650mAh Polymer Battery
Charge Time	+/- 2.5 hours
MIC Sensitivity	-42dB +/- 3
Impedance	32Ohms
Plug Type	3.5mm/6.35mm

Features

Components

- 1 Volume up/
Next track

 -  Short press
 -  Long press

- 2 Multiple
button

 -  On/Off
 -  Call/Answer/Hang up
 -  Play
 -  Pause

- 3 Volume down/
Previous track

 -  Short press
 -  Long press

- 4 3.5mm Aux-in

- 5 LED indicator—Bluetooth, Charging, Power on



- 7 Micro USB charge port

- 9 3.5mm jack

- 6 MIC


- 8 6.35mm Port

- 10 6.35mm jack

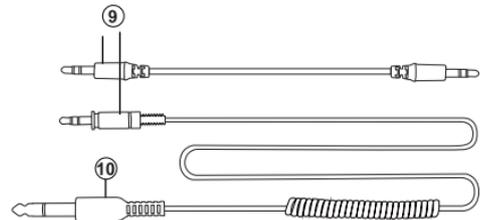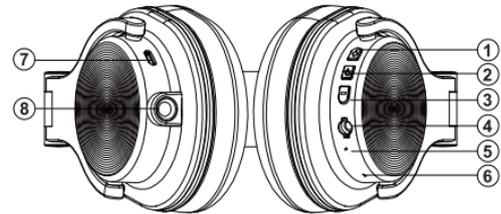


- Jack lock system

Plug the 3.5mm plug into the jack, swivel right 90°, then the cable is locked. Swivel left 90°, then unplug the cable. No matter how much movement there is, the cable will not come out of the headphones port. This is a great benefit for DJs and musicians.

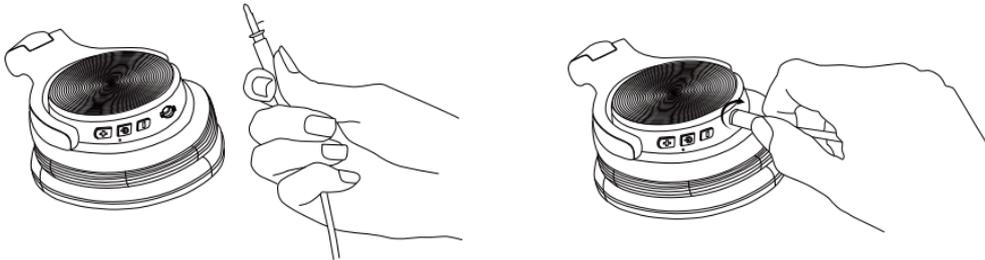


- Dual-duty cable & Adapter-free

There are gold-plated 3.5mm & 6.35mm plugs on each end of the audio cable, simply plug in according to your needs. Specially designed for DJ, perfect for mixers, electric guitars, keyboards, and more.

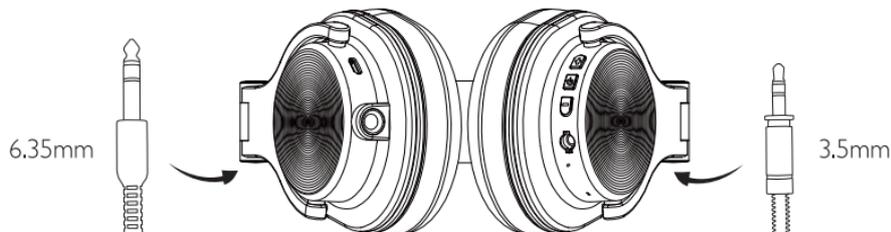


- Bluetooth music sharing

Pair your device via Bluetooth and share your tunes through the dual-duty cable! Simply enter the CT3016 Headphones into pairing mode. Connect the main headphones with 6.35mm jack, and use the other end 3.5mm jack to connect to another set of Parrot headphones. Then you can share your favorite music and videos with your friends.

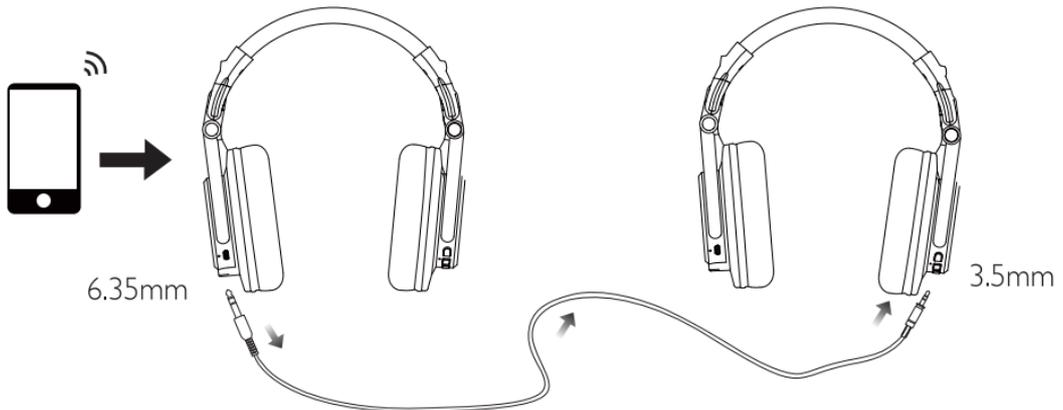


- Premium tuned sound quality

Hear every detail: voice coil and driver diaphragm delivers professional-quality sound.

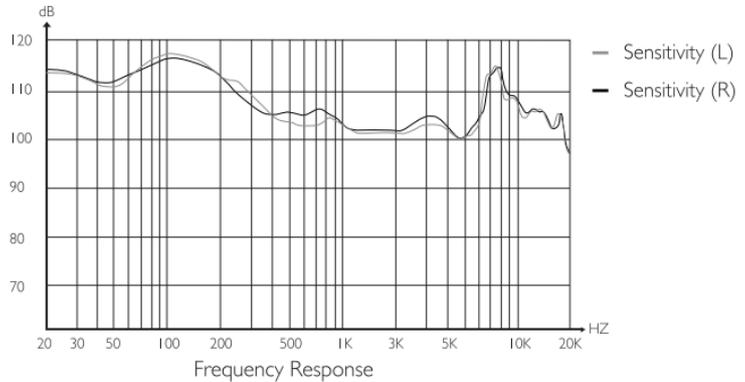

- Portable & Adjustable

The memory-protein ear cups are designed to disperse pressure and heat build-up, combined with the protein PU leather to give you maximum comfort & superior isolation. Adjustable padded headband ensures a custom and perfect fit to your head.

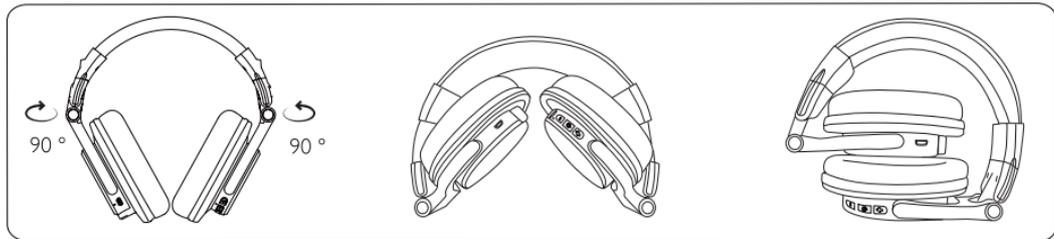

■ Pairing a wireless device

Keep the headphones and the mobile phone/music player within 1 meter of each other when pairing. Enter pairing mode directly after switching on the headphones.

Turn your iOS, Android or Windows device's Bluetooth on and select "CT3016" from the list of found devices.

■ Playing music

1. Adjusting the volume: Short press "+" or "-" for volume up or volume down. The volume is completely synchronized with iPhone and most Android devices.
2. Music Selection: Long press "+" or "-" for next track or previous track.
3. Play/Pause: Press (don't hold) Play/Pause ② to switch between play and pause status.

Note: The controls will not function when charging or in wired mode.

If asked for a passcode, please enter "0000" and the headphones will be connected to your device. After pairing successfully, the LED light will flash blue occasionally, you can then answer the phone or listen to your music.

■ Power on

Press and hold the On/Off ② button to turn the headphones on. The LED light will flash between blue and red when the headphones are active.

■ Power off

Press and hold the On/Off ② button to turn the headphones off. The LED indicator turns off, indicating that the headphones are off.

■ Charging

When your headphones is charging with USB cable, the indicator light is always red and when it is fully charged, the indicator light turns blue.

■ Turn to wired mode

- 1 Ensure the headphones are switched off during wired mode
- 2 Connect the 6.35mm cable into the 6.35mm Aux-in
- 3 Connect the other end of the cable into your device

Note 1: Inserting 6.35mm cable disables wireless functions

Note 2: The controls will not function when charging or in wired mode

■ Troubleshooting

If you cannot connect the headphones to your device, please try the followings:

- 1 Ensure that the headphones are charged, switched on, paired with and connected to your device.
- 2 Check the headphones are within 12 meters (39 feet) of your device and there are no obstructions (such as walls or other electronic devices) between the headphones and the devices.
- 3 If you receive an intermittent signal, please ensure the headphones are fully charged before continuing use.
- 4 **Reset:** Press and hold the volume up and down button simultaneously for 7 seconds after power on to clear the Bluetooth record.

Warranty



Refer to our website
www.parrot.co.za
for warranty information