




# Parrot OPS PC - IC1000

## User Manual




Tel: (RSA) 010 140 4900 / Email: [sales@parrot.co.za](mailto:sales@parrot.co.za)  
[www.parrot.co.za](http://www.parrot.co.za)

# Packing Checklist

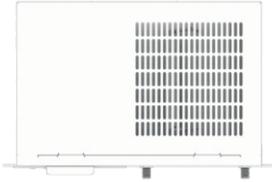

1 x OPS PC Module

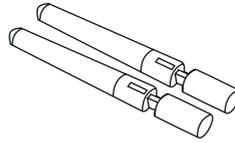

2 x Wi-Fi / BT Antenna


## Install OPS PC Module

### STEPS

1. Disconnect the display from mains power.
2. Insert the OPS into the OPS slot. Make sure the arrow labelled 'front' points to the front of the display. In this orientation the **vent holes** of the OPS PC is facing vent holes of the display.
3. Reconnect the mains power to the display.
4. If the display doesn't automatically restart after reconnecting the power, turn on both the display and OPS PC manually. Look for the -icon on the OPS PC.
5. Select OPS/PC as input source on the display.

### CAUTION!

Incorrect insertion can result in a defective OPS PC or display.

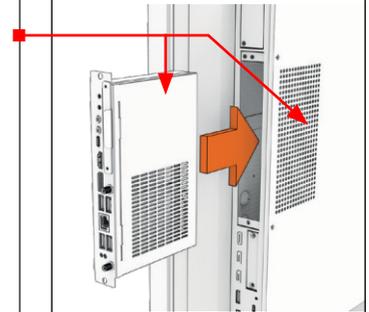

For both inserting and removing the OPS, make sure to disconnect the power before doing so. (See step 1)

Most displays provide the OPS PC with LAN if there is an existing LAN connection to the display.

## Connectivity Panel

