



User Manual

JA0801_Janitorial Bin Touchless - 50L



For further information, please visit / contact us on:

RSA
010 140 4900

• **Botswana**
+267 318 8799



• **Namibia**
+264 83 331 8110

• **Zambia**
+260 211 350 020

Email: sales@parrot.co.za / www.parrot.co.za

Contents

- 1 x Bin base
- 1 x Bin rim
- 1 x Lid compartment

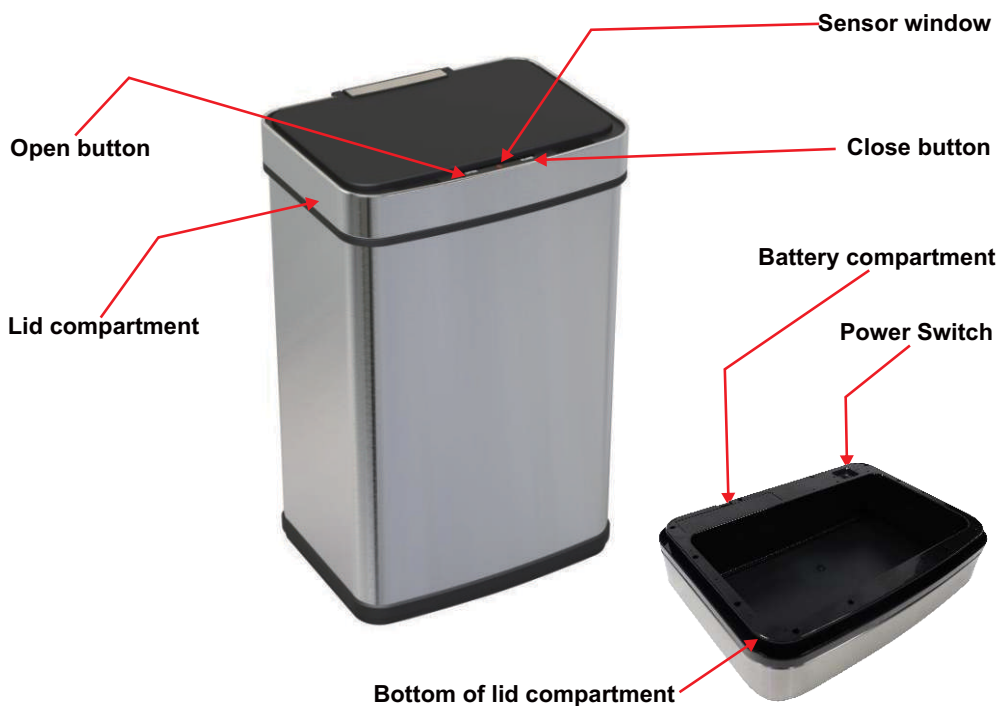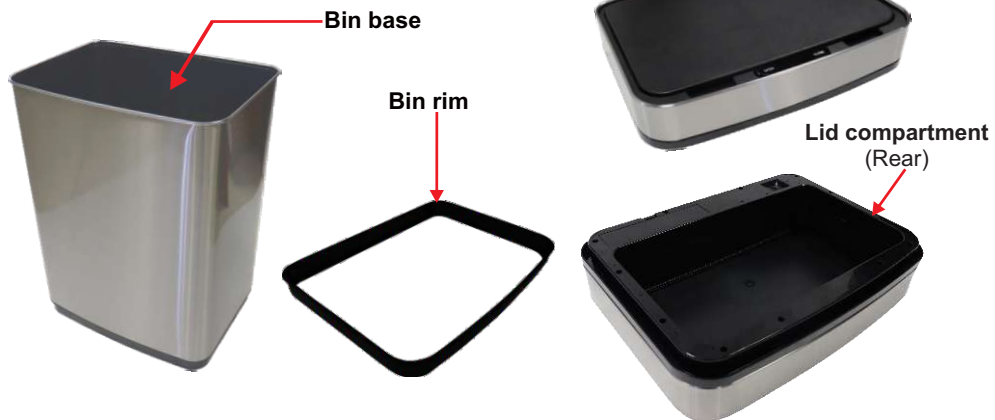

Safety Instructions

Before use, please carefully read the below safety points:

- Incorrect operation may result in injury to person or damage to the product.
- Wipe clean using a clean damp cloth.
- Avoid direct sunlight on the motion sensor window receiver.
- Do not open the lid with force.
- Do not place anything on top of the lid.
- Replace with new batteries when bin indicates.
- Do not dismantle, repair or alter the product in anyway.

Operating Instructions

- Lift the lid compartment to access the battery cover located underneath the lid.
Insert 6 x AA batteries (not included).
- The power switch is positioned on the rear of the lid compartment.
Turn to ON and replace the lid compartment.
The indicator light will turn red for approx. 2 seconds.
- To open the lid, hover your hand over the sensor window. The lid closes automatically after 5 seconds. The lid will remain open if you continue to hover your hand over the sensor window.
- To open the lid manually and in order to empty the dustbin, press the “Open” button at the sensor window. Pressing the “Open” button will keep the lid open.
Press the “Close” button on the sensor window, allowing the lid to close manually and resume operation.
- When inserting or removing an inner plastic bin bag, remove the lid compartment for ease of access.
- In ready mode, the indicator light briefly flashes red every 8-10 seconds.
- The indicator light flashes yellow every 8-10 seconds when batteries need to be replaced.