 


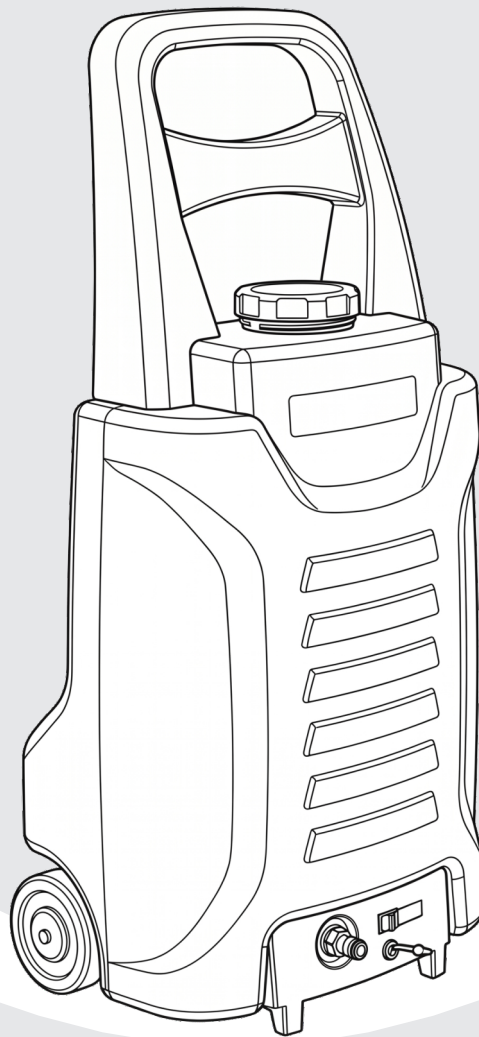

Mobile Rechargeable Watercart 30L

User Manual
JA0114

 


**Tel: (RSA) 010 140 4900 / Email: sales@parrot.co.za
www.parrot.co.za**

Notes:

- Mobile Rechargeable Watercart features a compact design, making it easy to store, transport, and operate. It is ideal for a wide range of cleaning applications, including cars, bicycles, motorcycles, garden fences, patios, driveways, and other household surfaces. It can also be used for watering plants and gardens.
- Before operating the watercart, please familiarize yourself with all components and functions as outlined in the “Product Overview” section of this manual.
- Fill the tank with clean water and connect the power supply. Ensure that all hoses, fittings, and connections are securely attached and free from leaks. If any connection appears loose, reconnect it properly. Do not force any fittings. If a leak persists, discontinue use and contact customer support.
- Always ensure that the water tank contains sufficient water before operating the watercart.
- Charge the battery for approximately 3–4 hours before first use, or until the charger indicator changes from red to green. To maximize battery performance and extend the lifespan of the lithium-ion battery, avoid excessive discharge and recharge the battery regularly.

Included Accessories:

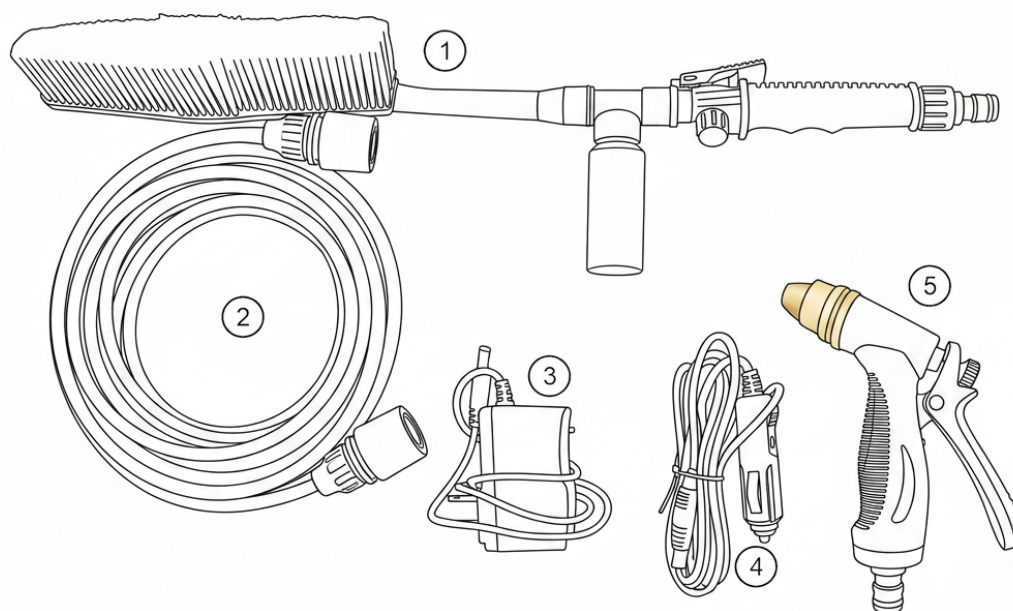

1. Soft-Bristle Brush (with Soap Dispenser)
2. 5m Easy-Connect Water Hose
3. Power Adaptor
4. DC Power Connector
5. High Pressure Spray Gun

Important Safety Information

Please read and follow all safety precautions before operating the machine.

General Safety

- Use the watercart only as intended.
- Keep children away from the equipment during operation.
- Do not operate the watercart if any component is damaged.

Water Usage

- Use clean tap water only.
- Do not use corrosive, acidic, flammable, or hazardous liquids.

Electrical Safety

- Do not operate the watercart if the power cable, charger, or electrical components are damaged.
- Keep electrical components dry at all times.
- Disconnect power immediately if a fault occurs.

Weather Conditions

- Do not use the watercart during thunderstorms or severe weather.
- Avoid exposing electrical components to rain.

Safe Operation

- Wear appropriate clothing when operating the watercart.
- Use non-slip footwear and safety glasses for protection.
- Keep hands clear of moving parts.
- Never leave the watercart unattended while operating.

Moving the Machine

- Switch off the watercart before moving it.
- Move the unit carefully and keep it upright whenever possible.


Water Tank Requirements

- Always ensure there is sufficient water in the tank before operation.
- Running the watercart without water may damage the motor and pump.

If a Problem Occurs

- Immediately switch off the watercart and stop using it if:
 - The motor fails to operate.
 - Unusual noises occur.
 - Smoke or burning smells are detected.
 - Water leakage cannot be corrected.

Product Overview

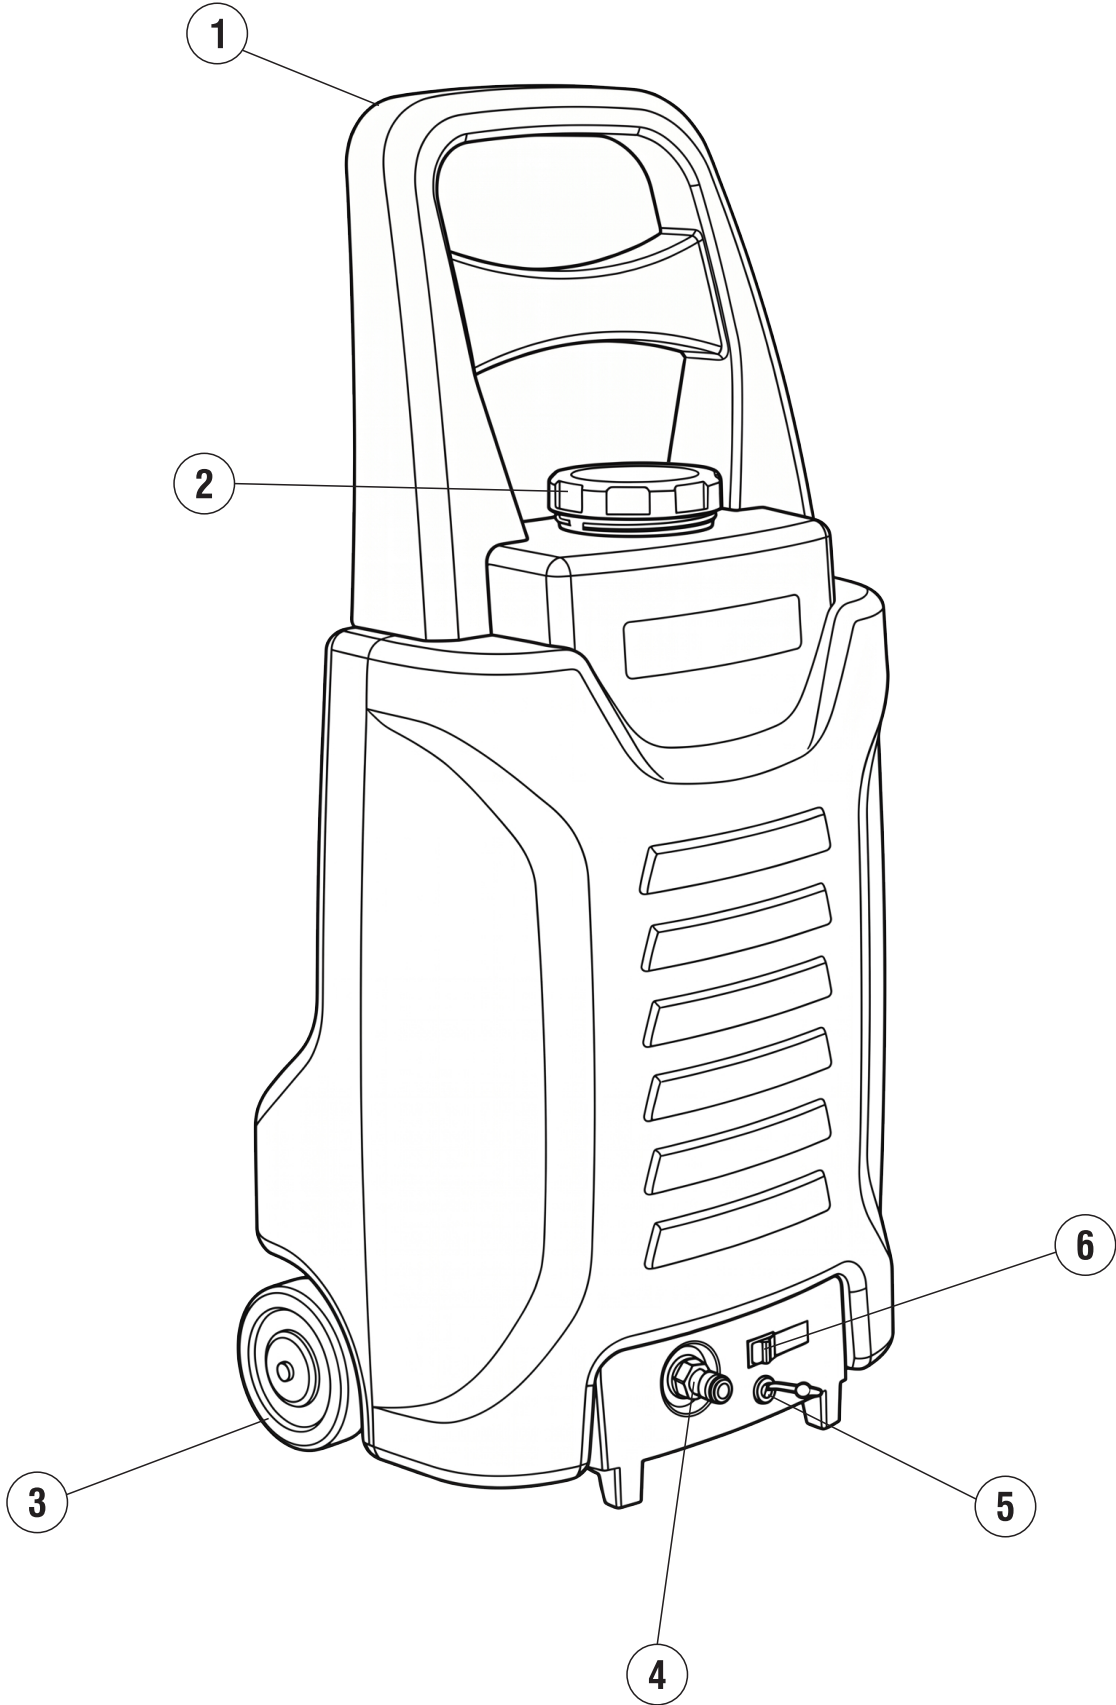

1. Handle

2. Water Inlet

3. Wheels
4. Water Outlet

5. On/Off Switch

6. Charging Port

Operating Instructions

Step 1: Prepare the Watercart

- Place the watercart on a stable, level surface.
- Fill the water tank with clean water.
- Connect the water hose and spray gun securely.

Step 2: Check Connections

- Ensure all hoses, fittings, and connectors are properly attached.
- Inspect for leaks or loose connections.
- Reconnect any loose fittings before use.

Step 3: Power On

- Turn the power switch on.
- Ensure water is flowing properly through the system.
- Begin cleaning using the spray gun or brush attachment.

Step 4: After Use

- Turn off the watercart.
- Disconnect the power supply if charging.
- Drain any remaining water if the watercart will be stored for an extended period.
- Store the watercart in a clean, dry location.