



**Paper Shredder 8 Sheets
4 x 12mm Mini Cross Cut
- S1008MC**

User Manual



**Tel: (RSA) 010 140 4900 / Email: sales@parrot.co.za
www.parrot.co.za**

Safety Instructions



Read instructions before use.



Do not spray or keep any aerosol products in or around the shredder.



Avoid touching the document feed opening with hands.



Keep loose clothing or jewelry away from the paper entry slot.



Product is not intended for use by children (product is not a toy).



Avoid getting hair near the paper entry slot.



Do not insert foreign objects into the paper entry slot.



Keep away from moving parts

- **Always turn the shredder off and unplug the power cord from the AC outlet when not in use, before cleaning it, moving it, or emptying the waste basket.**
- **RISK OF FIRE. Never use any petroleum based or flammable oils or lubricants** in or around the machine, as some oils may combust causing serious injury.
- **Never shred large paper clips, window or insulated envelopes, continuous forms, newsprint, bound pages (e.g: notepads, magazines, etc...), transparencies, laminated documents, cardboard, any items with adhesives, hard materials or plastic (except Credit Cards).**
- Do not allow wastebasket to become full. This will lead to shredded material being pulled back up into the shredder and cause paper jams.
- Never place the shredder near water or any heat source.
- Do not use the shredder if the power cord is damaged in any way.
- Do not attempt to service this product yourself as doing so may expose you to sharp cutting blades and/or electricity and will void the manufacturers warranty.
- Never try to clean or clear the shredder blades.
- Never shred beyond the specified sheet capacity. This may result in extensive damage to the machine.
- * **ONE FOLDED SHEET OF PAPER EQUATES TO 2 SHEETS OF PAPER**
Heavier paper, humidity or other than rated voltage may reduce shredding capacity.

Contents

- Installation
- Operation
- Maintenance
- Troubleshooting

Specifications



Security level	High Security (P4)	Continuous run time	5 minutes
Cut size	4 x 12mm	Dimensions	329 x 226 x 495mm
Cut type	Mini Cross Cut	Auto start/stop	Yes
Paper feed width	220mm	Auto forward / reverse	Yes
Shred capacity	8 sheets	Overheat protection	Yes
Waste basket capacity	15 Litres	Shreds cd's / dvd's	Yes
Speed per minute	2m per minute	Shreds credit cards	Yes
Cool down time	30 minutes	Castor wheels	Yes

Installation

1. Make sure the basket door is securely closed shut. This shredder features a safety power cut off and will not operate if door is open. Shredders with pull-out wastebaskets feature a safety power cut off upon bin removal. The supplied wastebasket activates this switch, which allows the shredder to be operable.
2. Attach 4 castor wheels to the bottom of the shredder body.
3. A socket-outlet should be near the equipment and be easily accessible.
4. Connect the power cord to any standard 120 volt AC outlet.

⚠ Caution:


Microcut shredders have very sharp exposed blades on the underside.

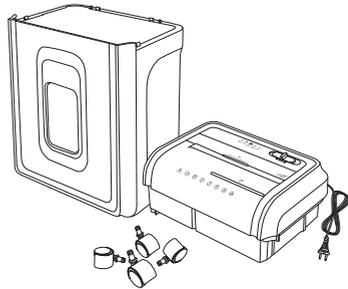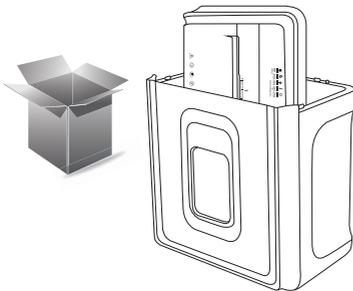


1 Remove the shredder from the box.

2 Carefully lift and remove shredder head and casters from the shredder body.


Installation

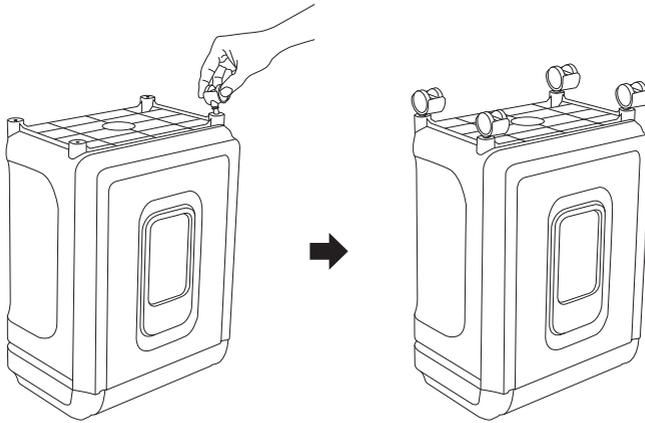

3 Attach 4 caster wheels to the bottom of the shredder body.

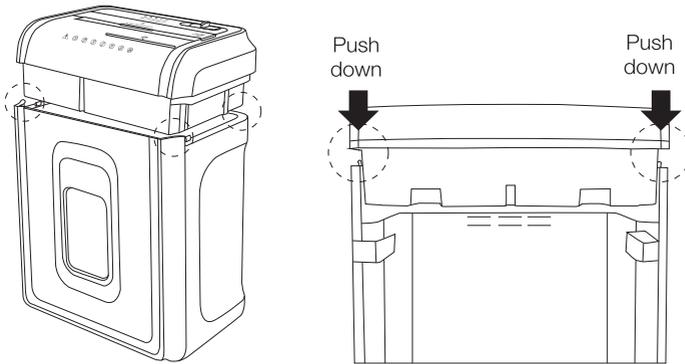

4 Gently place the shredder head onto the shredder body.

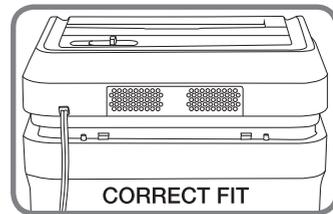

5 Make sure the shredder head is correctly mounted.



1 Control Switch



FIGURE 2

- Using the switch located on the unit, select one of the following settings by sliding the switch either left or right. (FIGURE 2)

- ▮ **Auto/On:** This setting allows the shredder to be automatically started by inserting paper into the feed slot. Always feed the paper in as straight as possible. When the paper has passed through, the shredder will automatically stop.
- **Off:** This setting turns off all features of the shredder. For safety reasons, we recommend that you leave the shredder in the “ off ” position whenever the shredder is unattended or not in use.
- ◀◀ **Reverse:** In the event of a paper jam, the reverse setting can be used to help clear the cutters of paper that did not pass through. Never attempt to clear a jam by using the reverse function until you have emptied the wastebasket.
- ▶▶ **Forward:** The forward setting can also be used to help clear the cutters in the event of a Paper jam. This allows to manually activate the shredder into cutting mode.

Operation

2 Paper / Credit Card / CD Entry:



- 1 Make sure you do not exceed sheet count per pass (8 sheets max). Insert paper as straight as possible into feed slot and release.



- 2 Insert one credit card at a time into the middle of the feed slot.

NOTE:

- Always turn off and unplug the shredder when not in use.
- This shredder will shred staples and small paper clips. It is recommended that you remove paper clips whenever possible to extend the lifespan of your shredder.
- Only shred credit cards by feeding them vertically into the middle of the entry, releasing when shredding begins. Never feed more than one credit card at a time.
- Overfeeding the shredder: Shredding beyond the specified sheet capacity can result in extensive damage to the shredder. Overfeeding will strain the machine and quickly wear and break the cutting blades and internal components.
- Overheating with extended use: In the event that the shredder has shredded continuously beyond the maximum running time and overheating, the unit will automatically shut off. If this happens, switch the shredder off for 30 minutes or longer before resuming normal operation.

Features a CD / DVD destroyer:



⚠ Caution: Do not hold CD/DVD with finger through the center ring while feeding into the shredder. Serious injury may occur.

Never feed more than one credit card or CD/DVD at a time.

- 1) Hold the CD/DVD by the edge and feed one at a time, releasing when shredding begins.
- 2) Shredder will stop when the entire disc has been destroyed.

Operation

3 LED Status Indicators:



**Binfull / Door open / Overload
/ Overheat / Power On**

- **Power On:**

The Green LED light indicates the shredder is "On" and ready to operate when paper is inserted.

- **Overheat:**

The Red LED light indicates the shredder has shred continuously beyond the maximum running time and overheating, the unit will automatically shut off. If this happens, switch the shredder Off for 30 minutes or longer before resuming normal operation.

- **Overload:**

The Red LED light indicates when too much paper is inserted. Use the "Reverse" mode to back up and reduce number of sheets.

- **Door Open:** The Red LED light indicates the shredder basket is not pushed in properly. Shredders with pull-out wastebaskets feature a safety power cut off upon bin removal. Make sure the pull-out wastebasket is properly set back into place and the green "Power On" indicator is lit.

- **Bin Full:**

When the "Basket is Full", the RED light will indicate it needs to be emptied. While lit, the shredder will be inoperable until the wastebasket is cleared.

Maintenance

Warning: Failure to properly maintain your shredder will void the warranty.

Oil the shredder blades every month with basic Parrot Products shredder oil. Follow oiling procedure below (FIGURE 3). This ensures the cutting blades run smoothly.



FIGURE3

◀ Oiling procedure:

1. Turn off shredder.
2. Apply shredder oil across paper entry.
3. Turn shredder in reverse mode for 3~5 seconds.

Note: lubricating oil is **NOT** included.



⚠ Caution:

- Do not spray or keep any aerosol products in or around shredder.
- DO NOT USE CANNED AIR ON SHREDDER.

CLEANING:

- ALWAYS UNPLUG THE SHREDDER BEFORE CLEANING!
- Only clean the shredder by carefully wiping the unit with a dry soft cloth or towel.
- Do not clean or immerse shredder in water.
- Never use anything flammable to clean the shredder. This may result in serious injury or damage to the product.

Troubleshooting

If there is a problem with your shredder, check below for the troubleshooting and steps to resolve. If you continue to have problems, contact customer support. **DO NOT ATTEMPT TO REPAIR BY OPENING THE SHREDDER HEAD. This will completely void the product warranty.**

• The shredder does not work at all.

- 1) Make sure the unit is plugged in and that the power outlet is in good working order.
- 2) **Overheating with extended use:** In the event that the shredder has shredded continuously beyond the maximum running time and overheated, the unit will automatically shut off. If this happens, switch the shredder Off for 15 minutes or longer before resuming normal operation.
- 3) If using a plastic bag to line the wastebasket, please remove it. This may cause the shredder not to operate properly.
- 4) The activation sensor of the shredder is located near the center of the feed slot. Be sure to feed directly into the center area to activate the machine (especially applies to smaller pieces of paper or credit cards).

• The shredder runs in "Rev (Reverse)" mode but not in "Auto (On)" mode.

- 1) While in "Auto" mode, the motor will not start running until paper is inserted into the feed slot. Set the unit to "Auto" and insert paper to shred. The sensor that activates the shredder in Auto mode is located directly in the center of the slot. If the paper you are inserting is narrow, it may not be activating the sensor. It is also possible that the feed slot has become blocked with paper. Insert an index card or any rigid sheet of cardstock (old greeting card or folded file folder), directly in the center of the feed slot, while applying force to help push the jammed paper through. This will usually clear any paper blockage.

• How to clear a paper jam in the shredder.

- 1) Switch the shredder over into Reverse (REV) mode. While in Reverse, the shredder will back up and loosen the jammed paper. If required, you may need to tug and remove several sheets to effectively clear the machine. When jammed paper is loosened or removed, switch back to the Auto-On mode to continue shredding. Repeat steps if needed.
- 2) With stubborn situations where the reverse function does not help, you may loosen the jammed paper with Parrot Products shredder oil (nothing aerosol). Start by drizzling oil into the feed slot where the paper is jammed. Let it soak for about 30 minutes to completely saturate. Return the shredder back to Auto-On mode. **If required, an index card or a rigid sheet of cardstock (old greeting card or folded file folder) can be fed into the shredder to help push the jammed paper through.**

Troubleshooting

The shredder back to **Auto-On mode**. If required, an **index card or a rigid sheet of cardstock (old greeting card or folded file folder)** can be fed into the shredder to help push the jammed paper through.



▲ Power switch in auto position

Use thick paper stock or greeting card to push the jam through



The shredder is constantly running while in "Auto (On)" mode.

- 1) It is possible that the activation sensor, which starts the shredder, has become blocked with paper. Insert an index card or any rigid sheet of cardstock (old greeting card or folded file folder), directly in the center of the feed slot, while applying force to help push the jammed paper through. This will usually clear any paper blocking the activation sensor and feed entry.
- 2) The activation sensor is being triggered by dust, debris, or oil. A cotton swab may be used to clean the sensor. **DO NOT USE CANNED AIR**. The activation sensor of the shredder is located around the center of the feed entry.