



User Manual

Electric Projector Screen



Tel: (RSA) 010 140 4900 / Email: sales@parrot.co.za / www.parrot.co.za

Please read the user manual before installation and usage.
Design and specifications are subject to change without notice.


Safety Guide

1. During assembly, do not stand underneath the screen.
Mounting bolt should be securely fixed into the wall or ceiling.
2. Be sure that the screen is connected to an earthed outlet to avoid any possibility of electric shock.

Notice




 
1. Do not run the screen continuously over 4 minutes (Overheat protection feature will stop the motor in case of overheat. You may operate the screen again after the motor has cooled down in about 20 minutes).
2. Do not scratch or crease the fabric.
3. After usage, please check and confirm the cleanliness of the screen surface before retracting the fabric.
4. Matte white surface can be cleaned with a soft damp cloth (Do not use alcohol or ether liquid to wash).
5. Any dust on the outer casing can be cleaned with a soft feather duster or a damp cloth.
6. Caution: The screen's Black Top Drop is already set to it's maximum drop distance. There is no extra Black Top Drop in the roller. Please be aware of this, as it will void your warranty.
Unapproved changes or modifications to this unit are prohibited and will void your warranty.

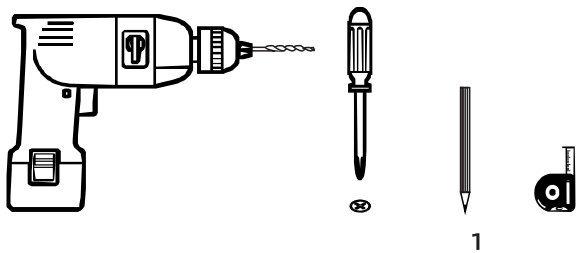
Tools for use during installation





Accessories

Remark: Kindly check if you have all accessories before installation.

ACCESSORIES LIST			
B.24.060120.6 	B.99.008000.0 		
x5	x5	x1	x1




x1

Wall Mount

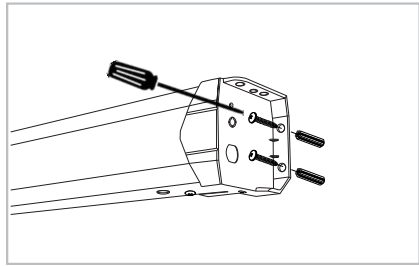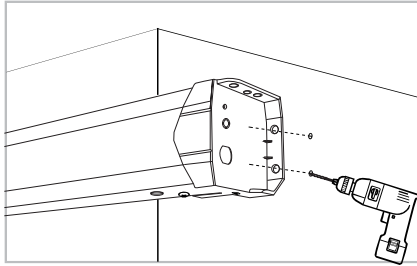


- STEP 1: Measure the distance between the keyholes on the end cap.
- STEP 2: Mark the location on the wall where you would like to install the screen and pre-drilled hole.
- STEP 3: Insert the proper screw into the drilled hole and leave some space to mount the screen.
- STEP 4: Mount you screen from the keyhole located on the back of two side end cap.

Ceiling Mount

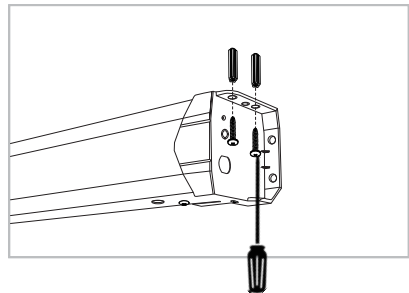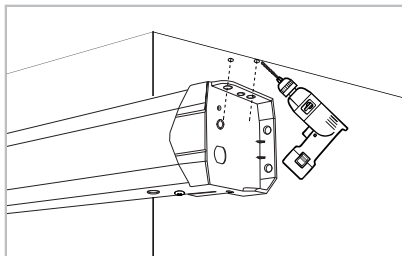


- STEP 1: Measure the distance between the top screw holes located on the top of the end caps.
- STEP 2: Mark the location where the screen is to be installed for the pre-drilled hole.
- STEP 3: Drill your hole, use a hollow wall anchor if needed.
- STEP 4: Insert the proper screw into the drilled hole and secure the screen to the ceiling.


Example of completed installation

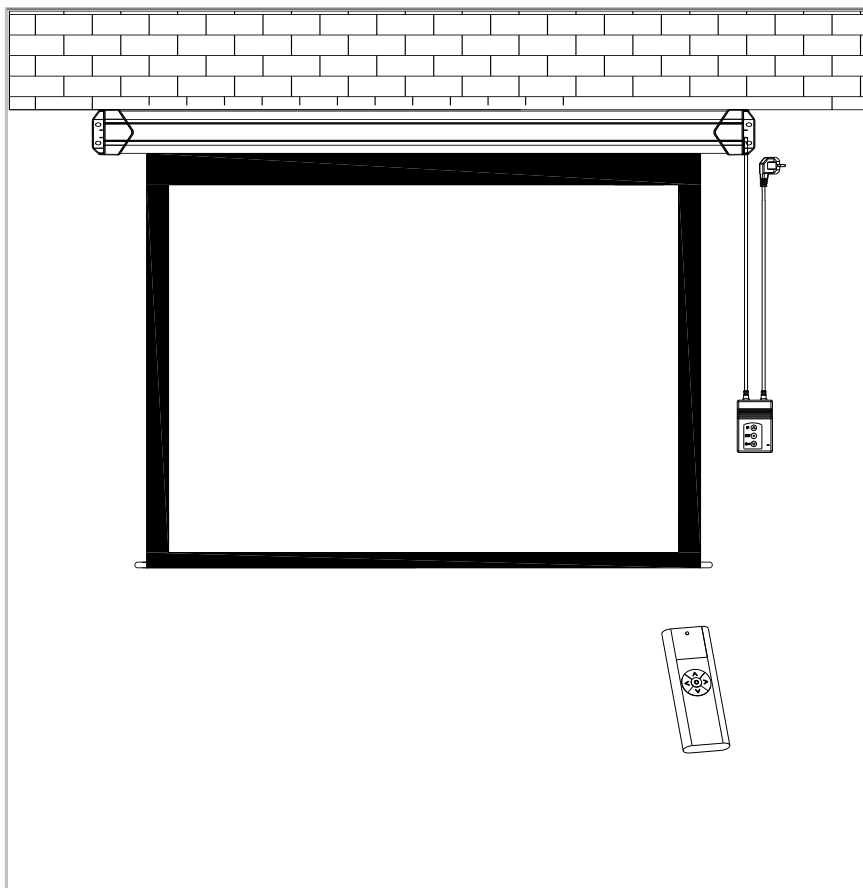

Adjustment and Usage

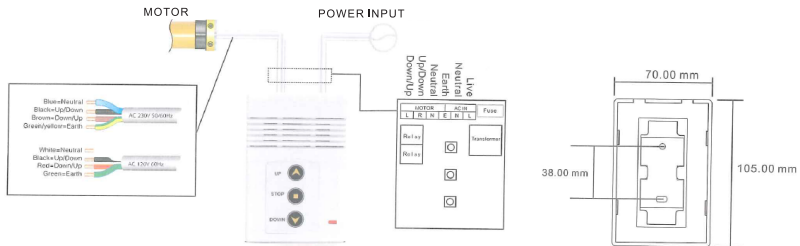

Program Each receiver is able to store 20pcs transmitters, the 21st transmitters cover the 20th transmitter automatically.

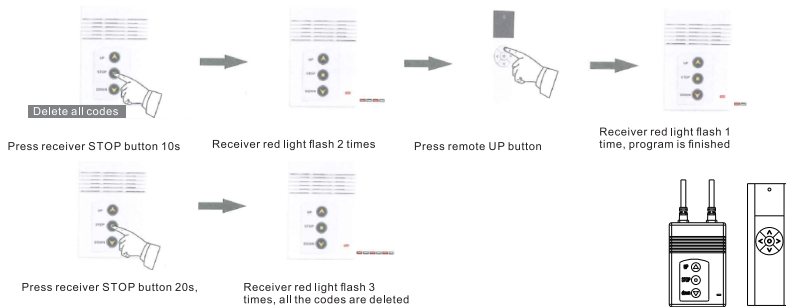

Ceiling Mount

Adjust position for the two limit journey, refer to below diagram

