


*Plug & Play*

## GT1060P Button configuration:

### 1. Open Driver setting interface; select Defined keys.

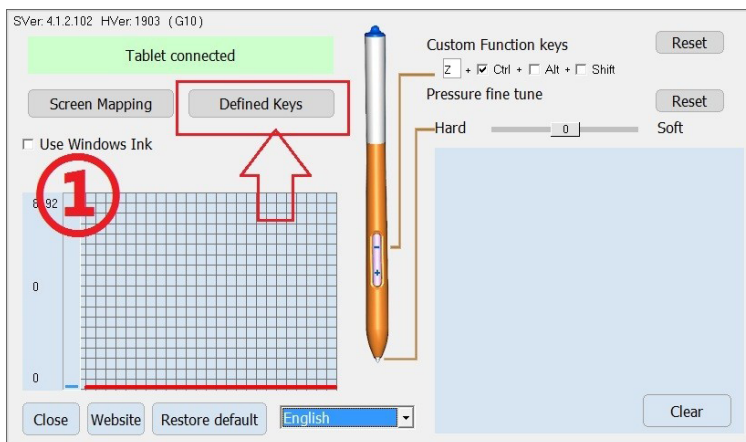

① Select the key that you want to customize.

② Use the keyboard to enter the key.

③ Select the Combination key, if needed.

④ Confirm it.

