


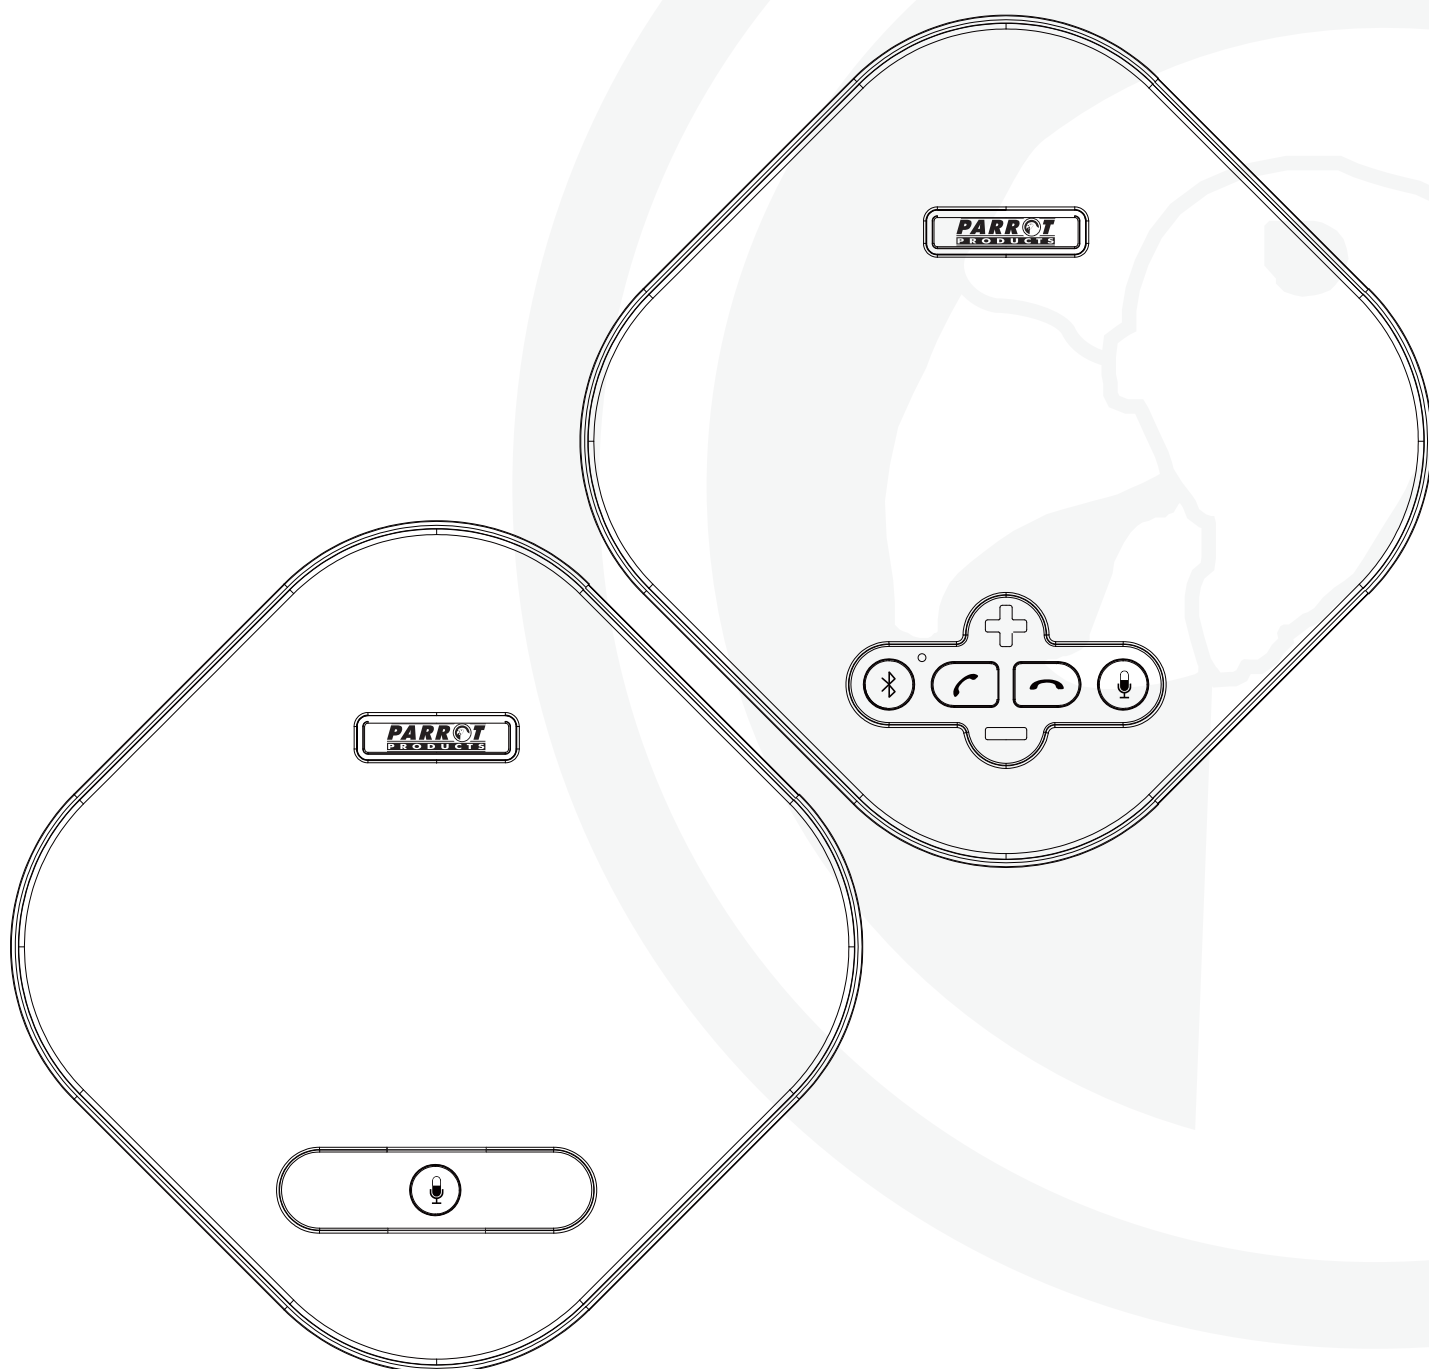

# Video Conference Wireless Microphone & Speaker VC2000W

---



For further information, please visit / contact us on:

Tel: (RSA) 010 140 4900 / Email: [sales@parrot.co.za](mailto:sales@parrot.co.za) / [www.parrot.co.za](http://www.parrot.co.za)

# Content

## **Product Description**

Speakerphone.....1

Parts list.....1

Optional Accessories.....2

**Speakerphone Interface Specification**.....2

**Extension Unit (Optional)**.....2

**Speakerphone Introduction**.....3

The USB/Wireless devices Keypad .....3

LED Status Indicator.....3

The Bluetooth devices Keypad.....4

LED Status Indicator.....5

**How to Use Speakerphone**.....6


**Wireless Connection**.....6

**Wireless Bluetooth Adapter Specification**.....7


**In/Out Connection**.....8

**Installation and Use of Extension Unit (Optional)**.....8-9

## Speakerphone

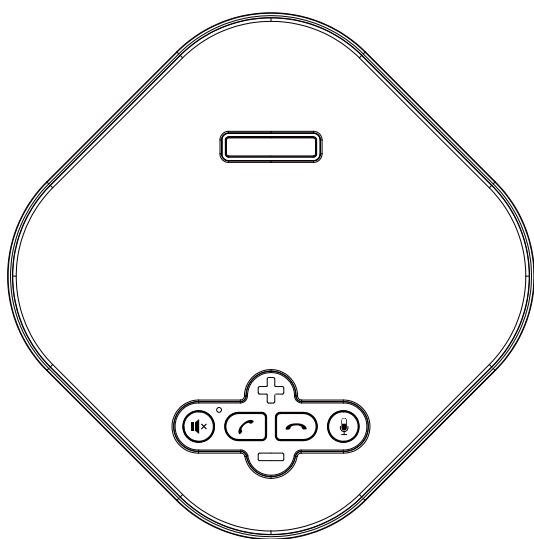


**USB/Wireless devices**

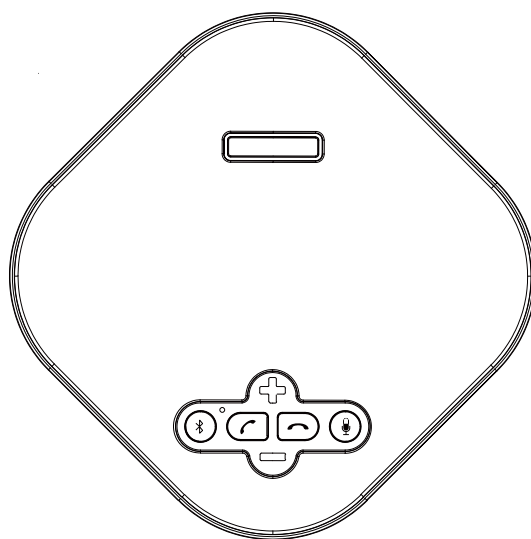


**Bluetooth device**


## Parts list

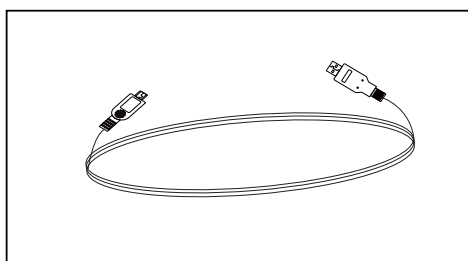


**USB Cable**

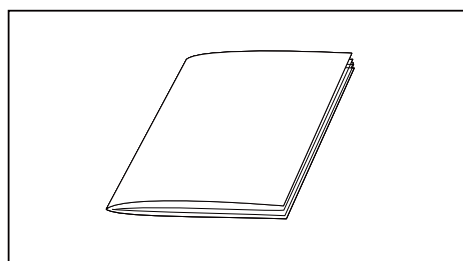

**User manual**

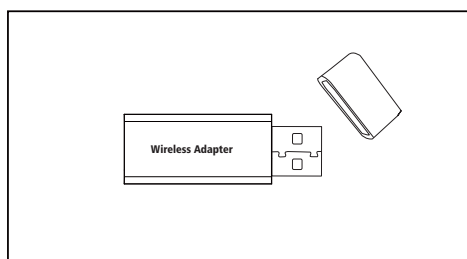


**Power adapter  
(The Wireless device apply)**

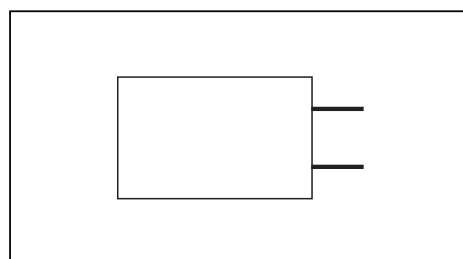


**Wireless adapter  
(The Wireless/Bluetooth  
devices apply)**


## Accessories

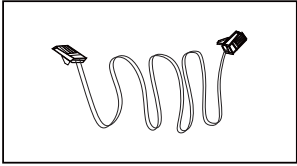


5m RJ45 Cable

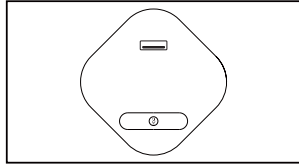

Extension Unit

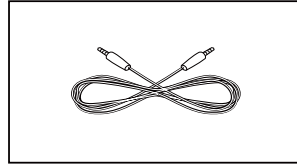


4-Strand  
3.5MM Cable

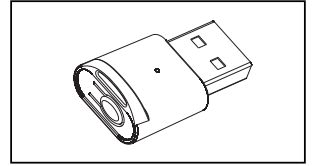


Bluetooth Adapter

If any items are missing or damaged, contact your place of purchase immediately.  
Do not use damaged products!

## Interface Specification

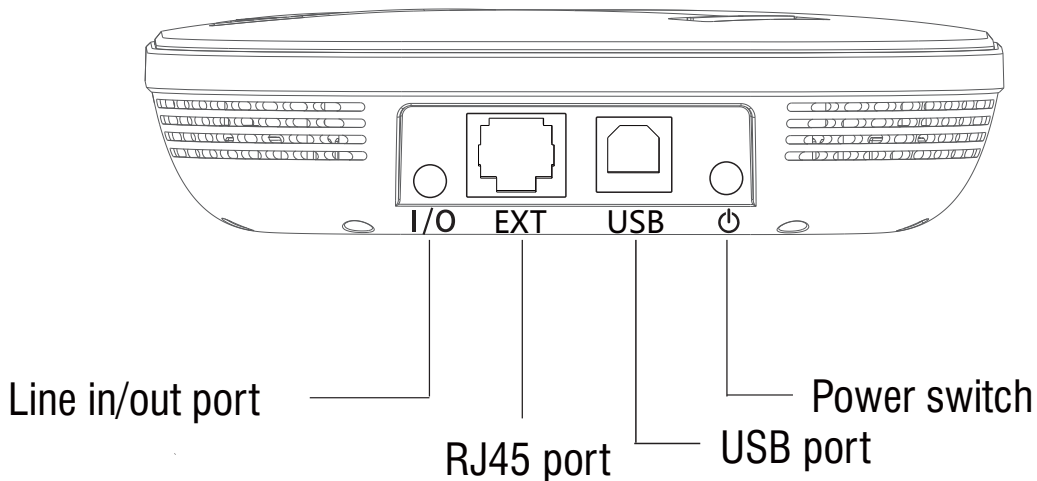


## Extension Unit (Optional)

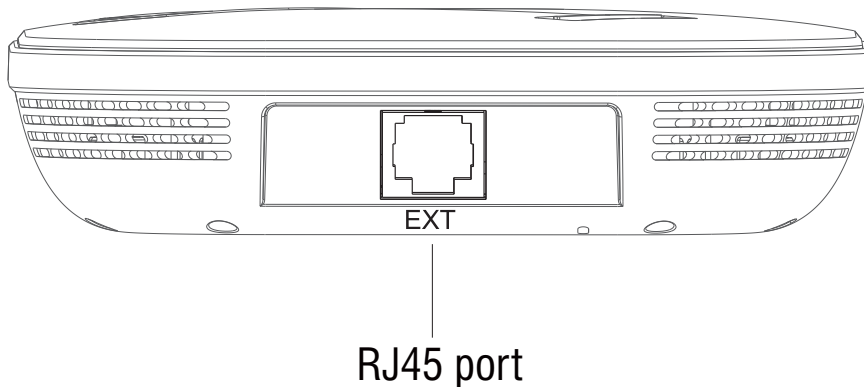


## Introduction

### The USB/Wireless devices Keypad

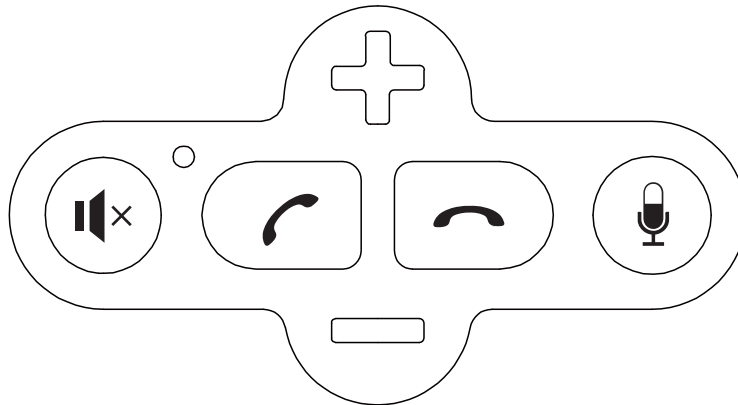


— +	Volume button	Turn down/up the volume
x	Speaker Mute	Turn on/o the speaker
📞	Answer/End calls	Answer/End calls
🎤	Mute Microphone	Turn on/off the Microphone

### LED Status Indicator

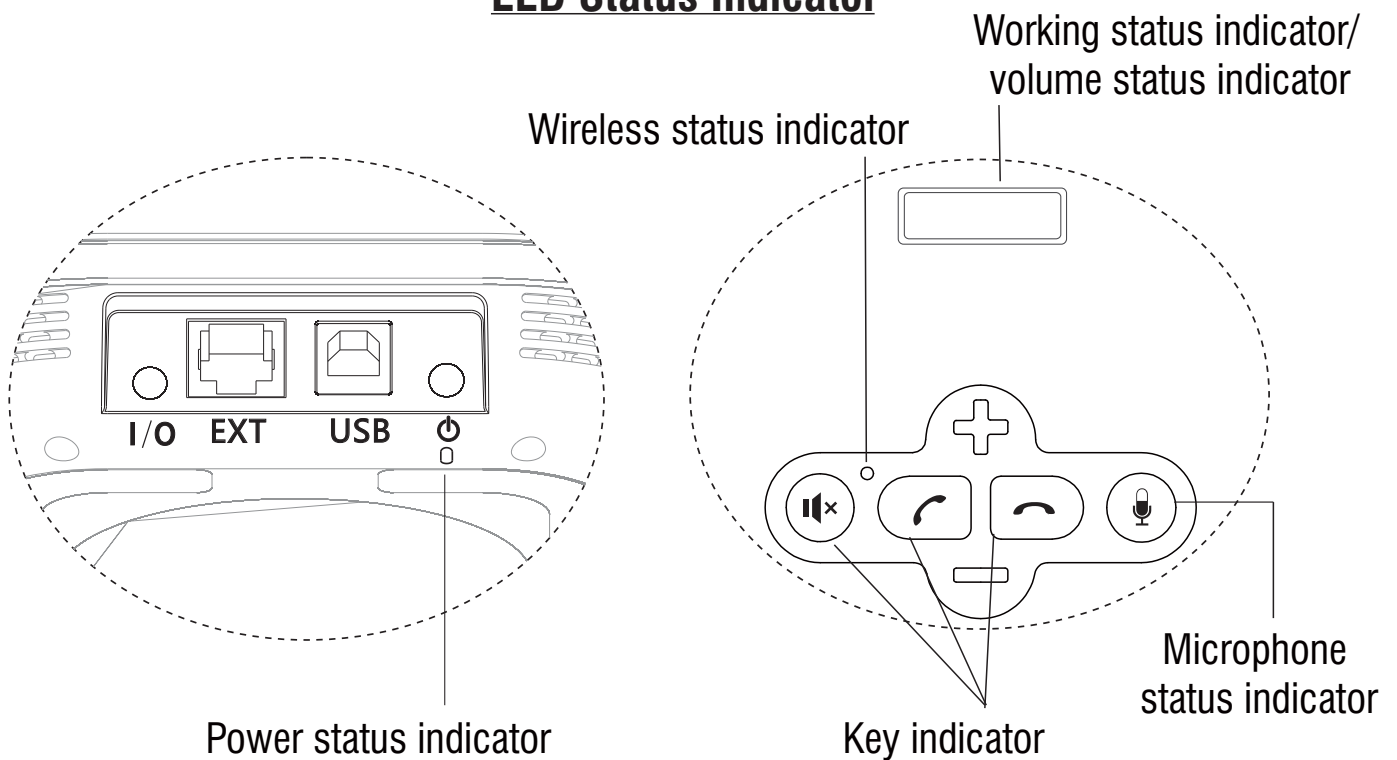


Power status indicator	Green light on	Speakerphone working normally
Wireless status indicator (The Wireless device apply)	Green light flashing	Wireless pairing state
	Green light on	Wireless connected
Working status indicator/ Volume status indicator	Red light on	Microphone mute
	Green light on	Microphone working normally/The brightness of status LED will increase or decrease with the speaker volume up or down.
	Green light flashing	Speaker mute
Microphone Status indicator	Red light on	Microphone mute
	Green light on	Microphone working normally

## **The Bluetooth device Keypad**

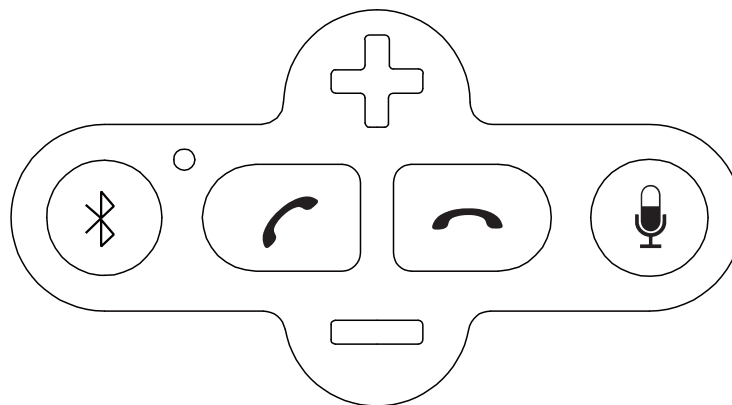

— +	Volume button	Turn down/up the volume
⌘	Bluetooth button	Turn on/off the Bluetooth
☎	Answer/End calls	Answer/End calls
🎤	Mute Microphone	Turn on/off the Microphone

## LED Status Indicator

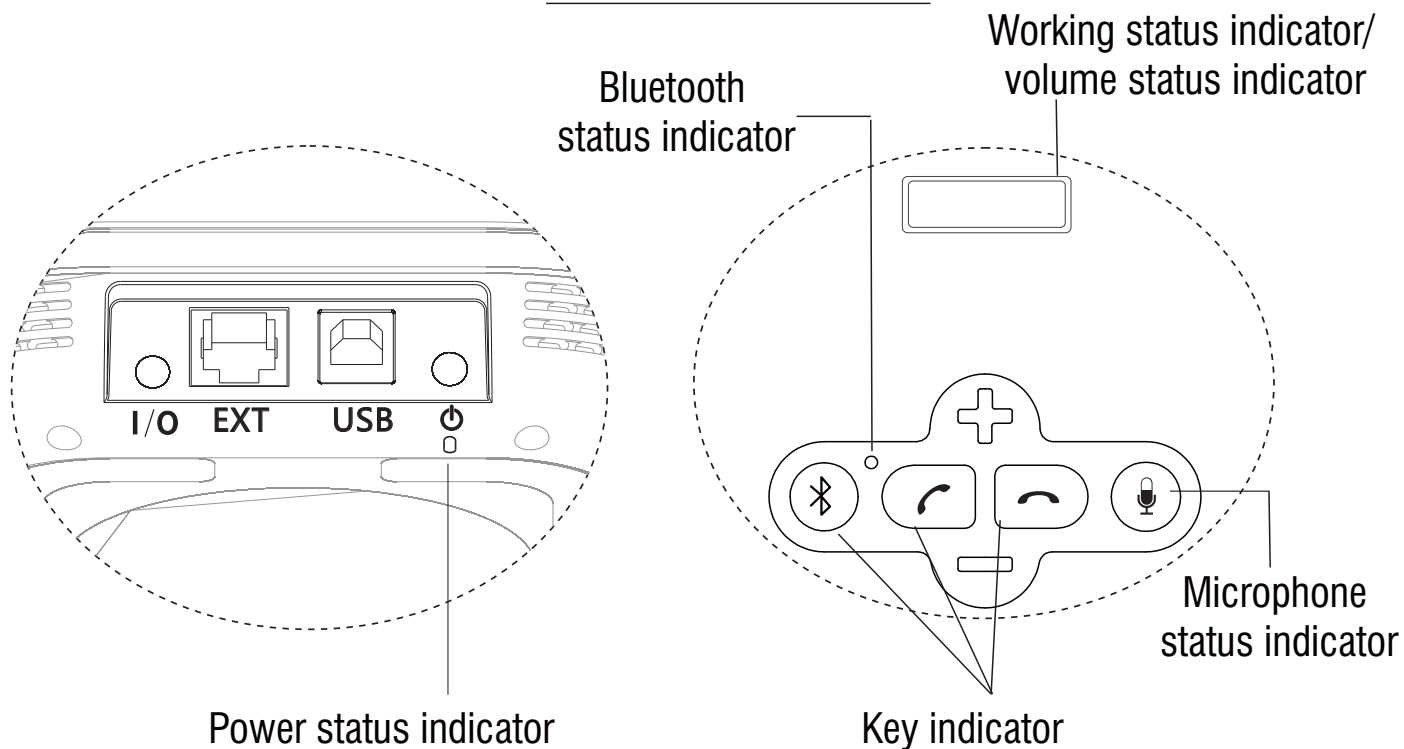

Power status indicator	Red light on	Low battery, must be recharged
	Green light flashing	Charging
	Green light on	The battery is fully charged.
Bluetooth status indicator	Green light flashing	Bluetooth pairing state
	Green light on	Bluetooth connected
Working status indicator/ Volume status indicator	Red light on	Microphone mute
	Green light on	Microphone working normally/The brightness of status LED will increase or decrease with the speaker volume up or down.
	Green light flashing	Speaker mute
Microphone Status indicator	Red light on	Microphone mute
	Green light on	Microphone working normally

## **How to Use**

### **Connection Steps for USB**

1. Using the supplied USB cable; Connect one end of the USB cable to the, speakerphone and the other end to the computer or other communication device
2. Turn on the power switch after confirming the correct connection on; It will take a few seconds to install the driver automatically for the first setup, the computer prompts the driver installation success. After confirming that all connections are correct, open the third-party conference software, and select the microphone and speaker driver to start the audio and video conference with the device.

### **Common Reference Settings for PC and Video Devices with USB Talking Mode:**

1. Please adjust the volume of speaker and microphones comprehensively to ensure the communication is clear and smooth.
2. Don't turn on the speaker and microphone automatic gain.
3. Give priority to turning off the audio processing functions of the PC software / video software (such as turning off automatic gain, echo cancellation, noise , reduction etc.).
4. Please use the speech / audio settings highest that has a higher sound quality

### **Wireless Connection**

The speakerphone can be docked with its own wireless/Bluetooth adapter. Providing quick and convenient wireless connection of audio devices The longest wireless transmission distance is up to 10 meters.

#### **The Wireless device connection steps:**

1. Insert the wireless adapter to the USB port of the PC or Video terminal.
2. Turn on the device. After 5 seconds, the Wireless Indicator light will burn green, confirming connection
3. Wireless voice calls can now be made.


#### **The Bluetooth device connection steps:**

When the device is under normal working condition, press " " to turn on Bluetooth for pairing Then the Bluetooth status indicator will flash;

1. Insert the Bluetooth adapter into your computer or other devices. The adapter will enter pairing mode. The adaptor will flash once every 300ms.
2. Bluetooth adapter will automatically search Bluetooth devices . After 10 seconds, the speakerphone and the adapter will establish Bluetooth Connection, once connected, the Bluetooth status indicator will flash once per second
3. Wireless voice calls can be made at this time.



## **Wireless Bluetooth Adapter Specification**

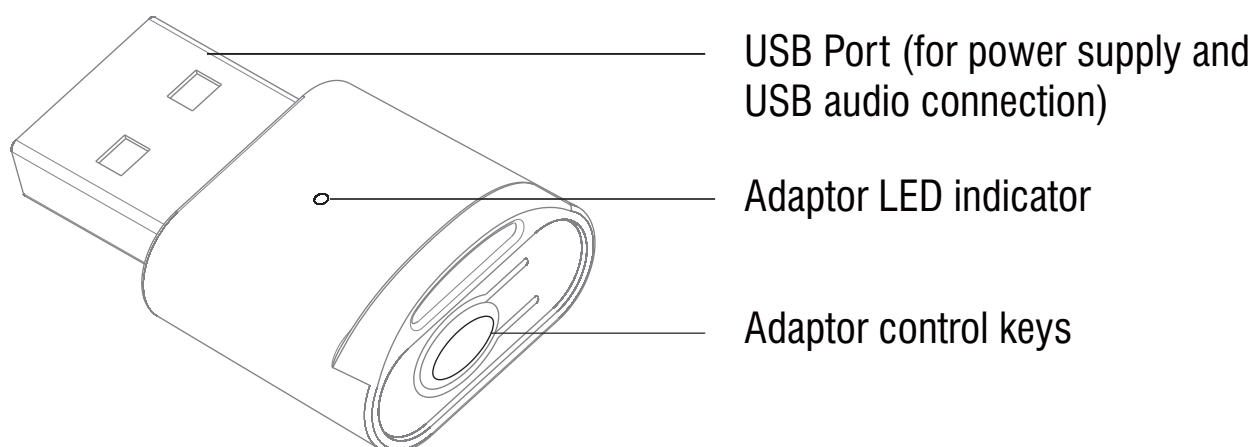

### **LED Status Indicator**



Adaptor LED indicator	light flashing quickly	The device searches for pairing status
	light flashing slowly	The connection is successful

### **Keypad**

Adaptor control keys	Double click on the key	The device enters the pairing state
	long press 5 seconds	Clear pair record

## **Bluetooth Connection (The Bluetooth device)**

Once paired with a Bluetooth device, you can use the speakerphone for audio calls. To pair your Bluetooth device with the speakerphone, follow steps below:

1. Press and hold the “” button until the Bluetooth Indicator green light flashes.  
The speakerphone is in Bluetooth pairing mode.
2. Turn on the Bluetooth function of the mobile phone and click search.
3. Search “Device name” with your Bluetooth device and connect.
4. When the Bluetooth is set up, the Bluetooth indicator light will stay on.  
Then you can use the speakerphone for audio call.
5. Press the “” button to turn off Bluetooth.

**Note:**

When Bluetooth fails to connect within 40 seconds, Bluetooth needs to be restarted.

**In/out Connection**

Use a 3.5mm 4-strand cable to connect your phone or PC device to the "I/O" port of the speakerphone.

If the device connection port is a 3.5mm 3-strand port, you need a transfer adapter for connecting. Insert audio transfer plug into the "I/O" port of Speakerphone.

Connect the microphone port and speaker port of Audio Transfer plug to the IN/OUT port of the PC or video conferencing system with two 3.5mm 3-strand cable.


**Note:**

Please set the phone LINE IN/OUT mode to "PC Mode" when connecting PC or video devices. Set the phone LINE IN/OUT mode to "Mobile Mode" when connecting a smartphone.

**Installation and Use of Extension Unit(Optional)**


Please use the extension unit when you need a larger connection or essential meeting.

1. Connect EXT interface of the main speakerphone unit and extension unit by using the original RJ45 cable. Connect to PC, communication device or power supply via USB cable. After ensuring all connections are correct, switch on power supply.
2. The extension unit has a speaker and microphones system. Two units simultaneously working in the same space, double the cover space of meeting room and the number of participants. The sound of the main unit and the extension unit are completely synchronized, and they can control each other at the same time.
3. The extension unit has a mute switch and status indicator. The indicator is green when the microphone works normally, and red when muted.

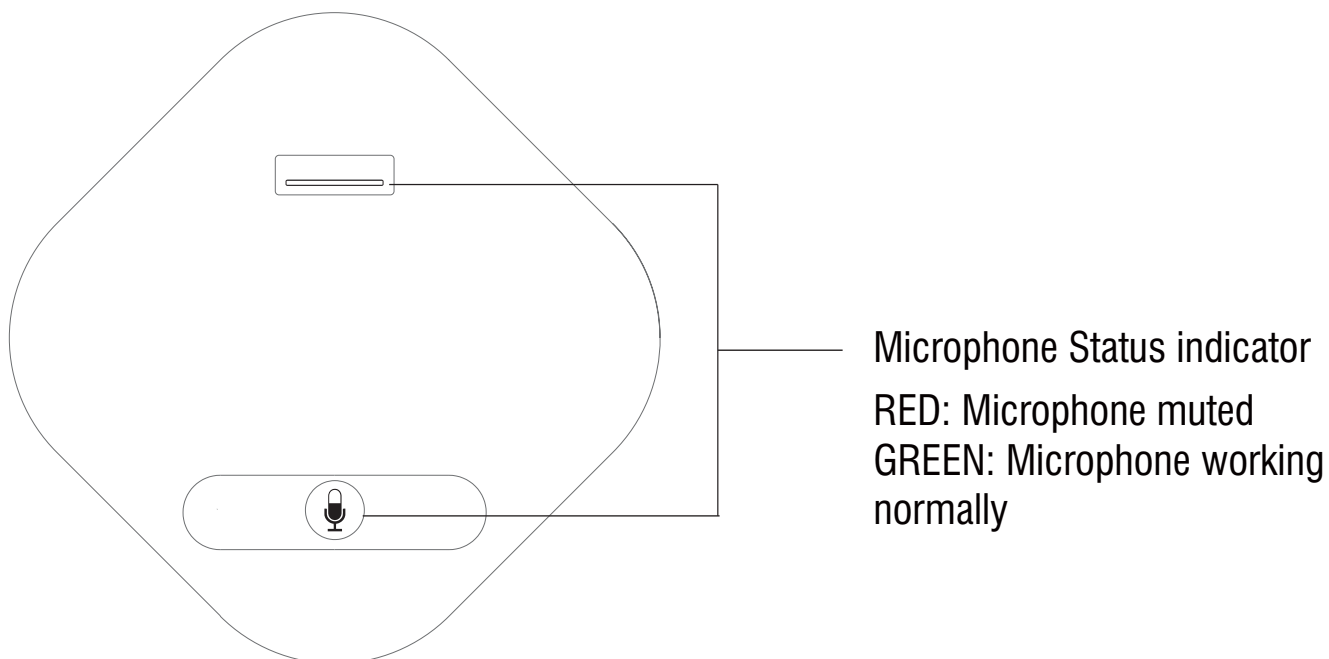

**Note:**

Ensure the main unit is properly connected to the extension unit, before switching on.

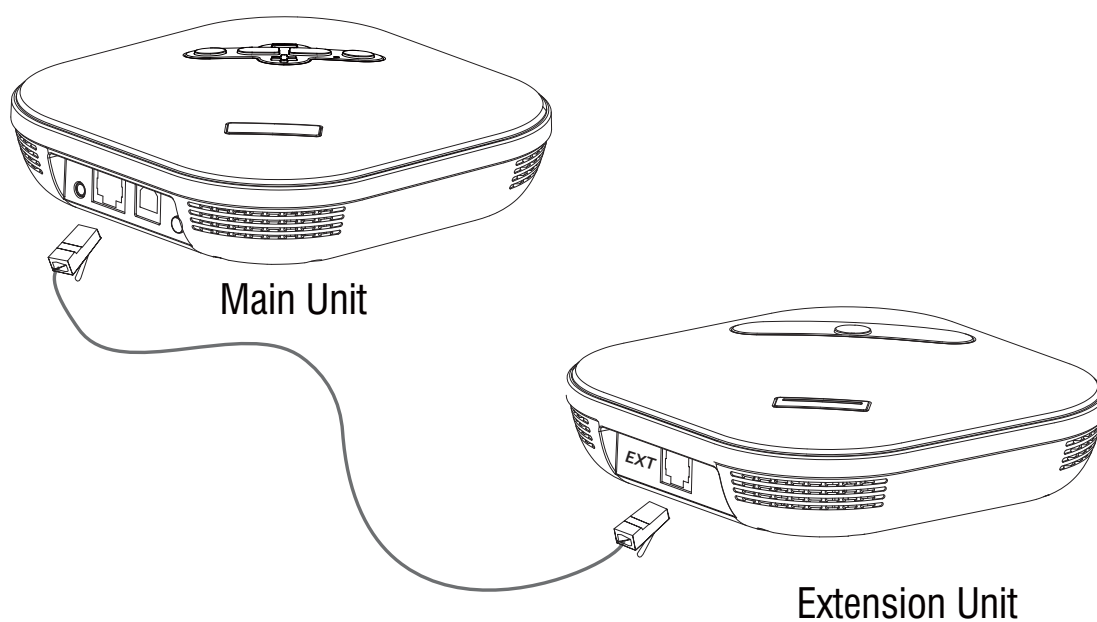

Connection diagram

