




T-LEG SET ASSEMBLY INSTRUCTION MANUAL







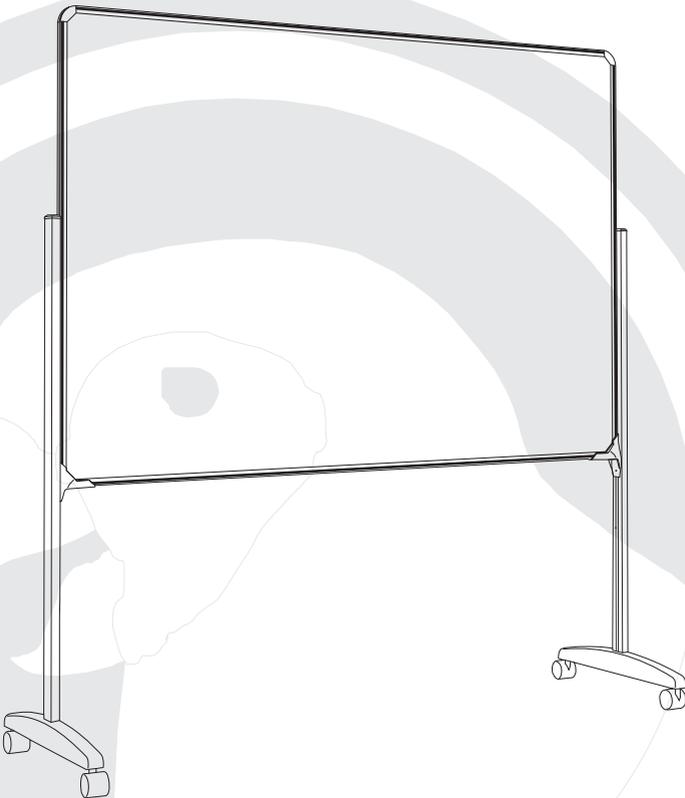


**BOARD NOT INCLUDED*

PARTS

CAUTION


- Ensure that all parts are included in the packaging.
- It is recommended that two people assemble the product to avoid damages.
- Read the instructions carefully before beginning the assembly procedure.

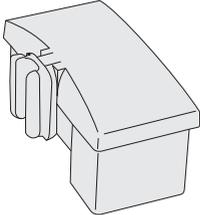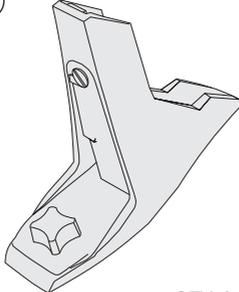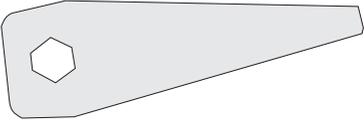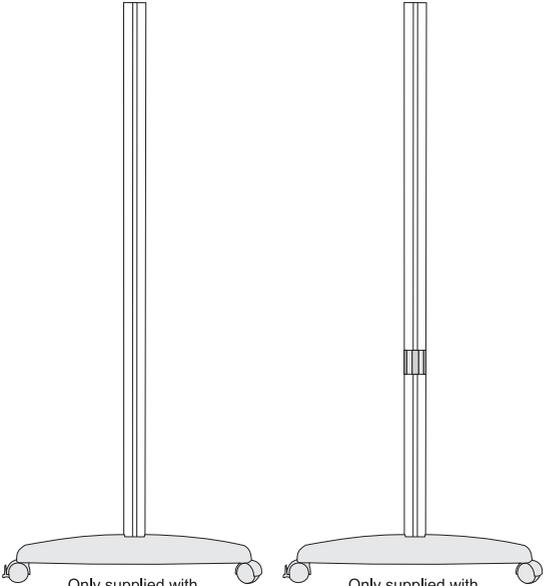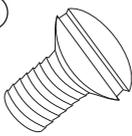 <p>QTY: 2</p>	 <p>QTY: 2</p>	 <p>QTY: 1</p>	
 <p>Only supplied with BD9012 T-Leg set for boards up to 1500mm</p> <p>Only supplied with BD9015 T-Leg set for boards 1600mm to 3000mm</p> <p>QTY: 2</p>		 <p>QTY: 2</p> <p>4 Additional screws supplied with BD9015 T-Leg Set for boards 1600mm to 3000mm, pre-fitted to Part 7</p>	 <p>QTY: 4</p> <p>4 Additional lug nuts supplied with BD9015 T-Leg Set for boards 1600mm to 3000mm, pre-fitted to Part 7</p>
		 <p>QTY: 2</p> <p>** Only supplied with BD9015 T-Leg Set for boards 1600mm to 3000mm</p>	 <p>QTY: 1</p> <p>** Only supplied with BD9015 T-Leg Set for boards 1600mm to 3000mm</p>

ASSEMBLY INSTRUCTIONS


Step 1:

- Loosen thumbscrew on part ② and slide part ② into leg ④, as illustrated, with the lug nut of thumbscrew inside the leg channel.

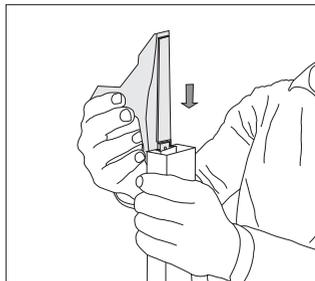


Step 2:

- Slide part ② to cover indicating sticker.

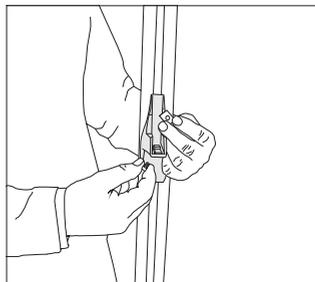


Step 3:

- Tighten thumbscrew on part ②.

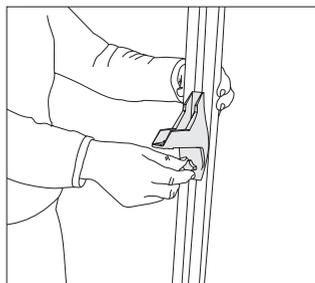

Step 4:


- Insert end cap ① into leg ④.

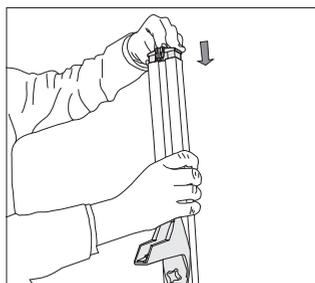

ASSEMBLY INSTRUCTIONS


Step 5:

- Slide lug nut ⑥ into easy groove, on bottom frame of board.

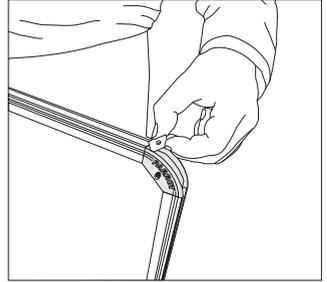

Step 6:


- Use measurements on the back of this instruction booklet to position the hole of lug nut ⑥ 25mm from edge of aluminum frame (as illustrated). Keep the board in this position and proceed to Step 7.

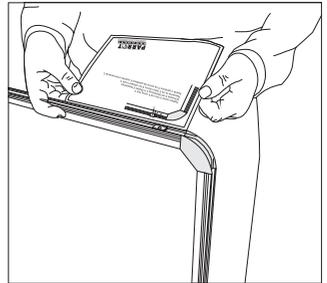

Step 7:

- Turn T-leg ④ upside down and slide the end cap-side of the T-Leg into side frame of board, until Part ② locates securely over bottom frame of board.


Take care not to break the plastic end cap through excessive leverage.

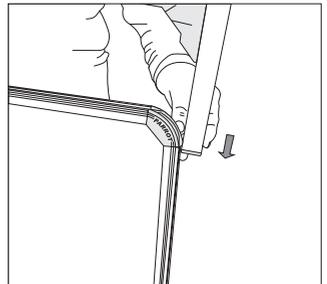

Step 8:

- Insert screw ⑤ into lug nut ⑥ and tighten using tool ③ or a screw driver.


(Repeat steps 1 to 9 for opposite leg).

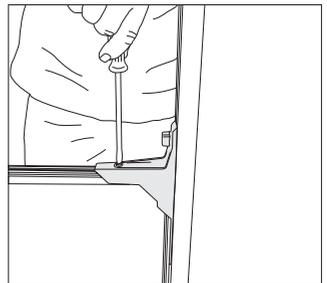

ASSEMBLY INSTRUCTIONS

Step 9:

- Use thumbscrew to adjust height and level the board.

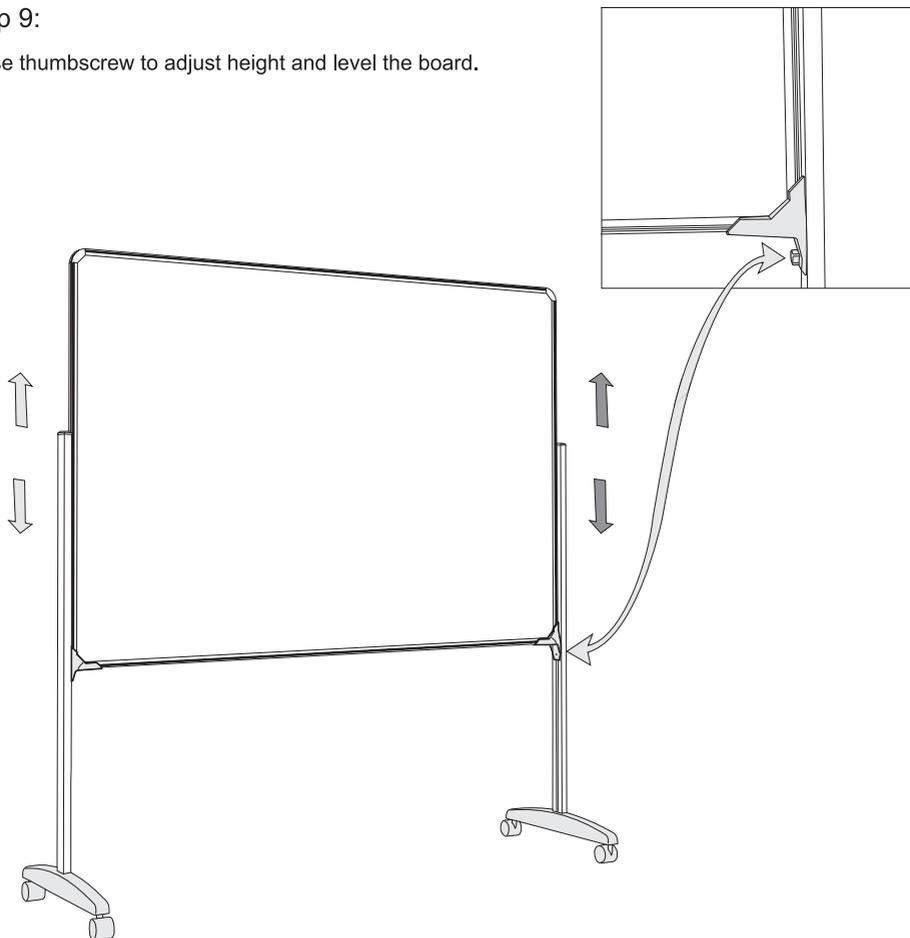


ADDITIONAL ASSEMBLY INSTRUCTIONS

FOR BD9015 T-LEG SET FOR BOARDS 1600MM TO 3000MM


Step 10:

- Slide the extension bar ⑧ into both, the left and right, horizontal support bars ⑦. Ensure that the pre-fitted lug nuts, on the support bars ⑦ remain parallel in the groove for smooth sliding.

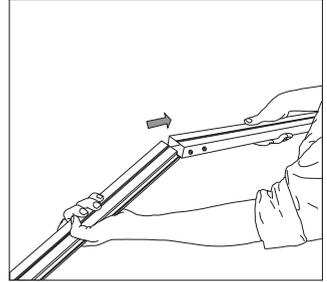


Step 11:

- Slide the horizontal support bar ⑦ onto pre-attached fitting on one of the vertical legs ④.

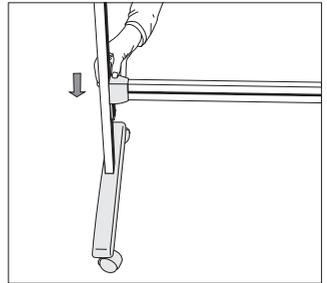

Step 12:

- Adjust the extension bar to accommodate the width of the board by pushing or pulling the extension bar closer or further apart. Attach the loose end of the support bar ⑦ to the pre-attached fitting on the opposite vertical leg ④.

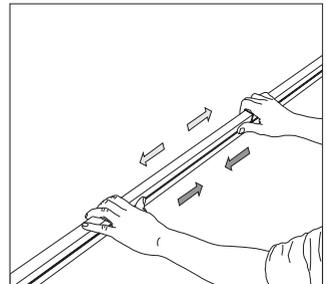

Step 13:

- Once the width adjustments have been made, tighten the screws ⑤ to the lug nuts ⑥ underneath the support bars ⑦.

