


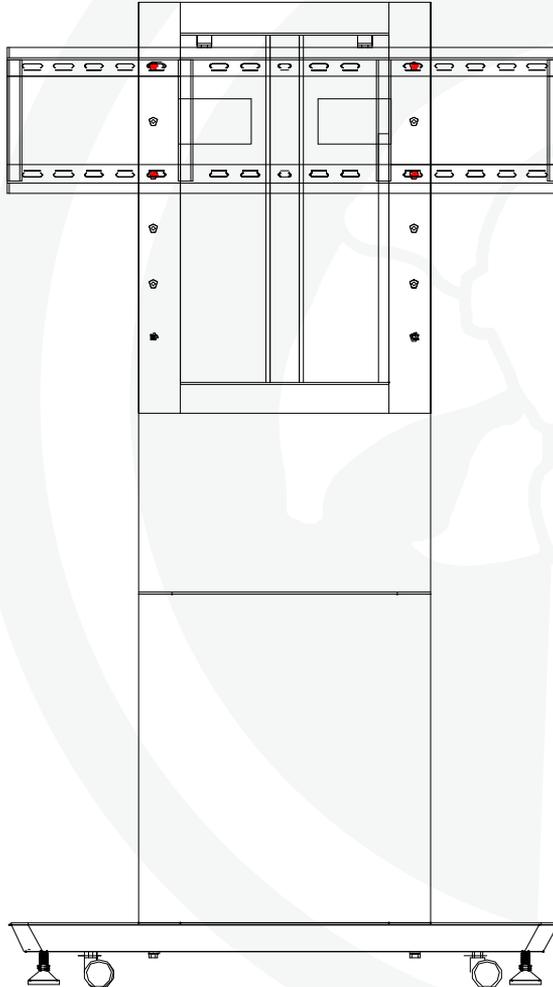

IW7103: Interactive Touch Panel Mobile Stand




For further information, please visit / contact us on:

Tel: (RSA) 010 140 4900 / Email: sales@parrot.co.za / www.parrot.co.za

■ Parts list

Description	Quantity/PCS	Position
Base	1	
M10*70 screw foot cup	4	Assembly with base
2.5 inch universal casters (hole spacing 51*35)	4	Assembly with base
Mobile bracket body	1	Assembly with base
Wall crossbeam	1	Assembly with body
Wall vertical beam	2	Assembly with crossbeam
M5*100 Screw	2	Assembly with vertical beam
M6*16 cross hexagon head combination bolts	16	Assembly with base
M8*20 hexagon bolt	13	Assembly with base and body
M8 spring washer (GB859)	13	Assembly with base and body
M8 flat washer (Gb848)	13	Assembly with base and body
hexagonal wrench	1	Assembly hexagon bolts


■ Product Structure

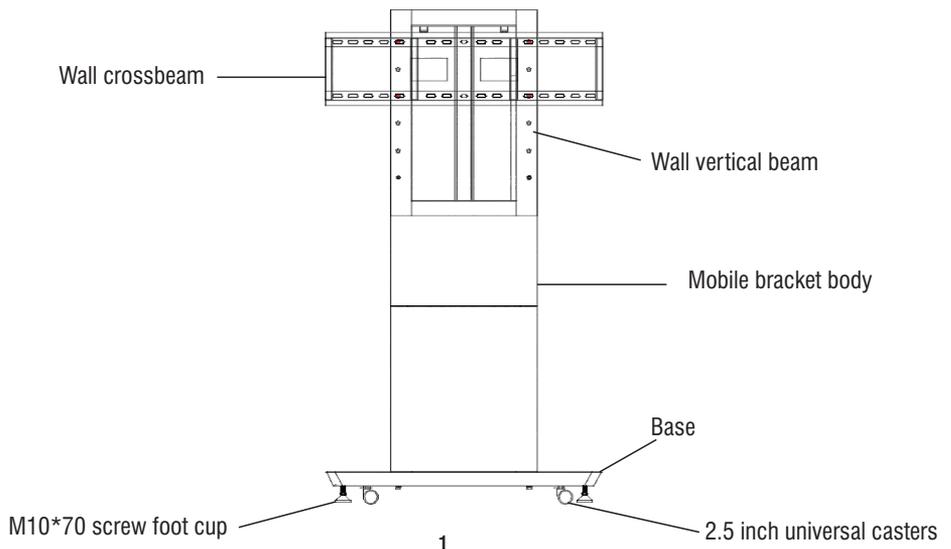

■ Step-1

Figure A

Base

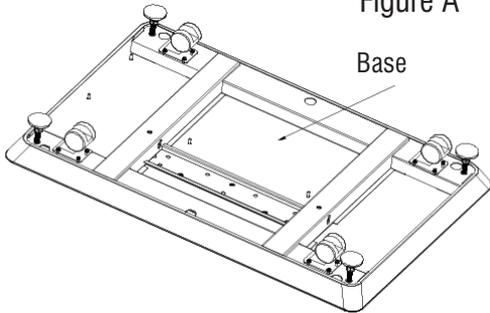

- Use screwdriver & hexagon head combined with M6*16 bolts to assemble the caster wheels to the base
- Directly lock the foot cups to the corresponding position of the base See Figure A



2.5 inch universal caster
(hole spacing 51*35)
(Quantity: 4PCS)




M10*70 screw foot cup
(Quantity: 4PCS)




M6*16 cross hexagon head
combination bolts
(Quantity: 16PCS)

■ Step-2

Figure B

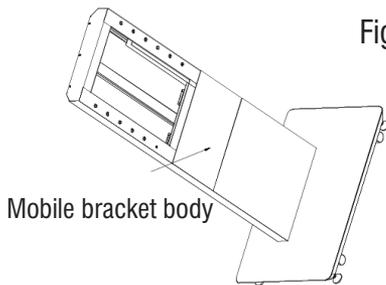

Mobile bracket body

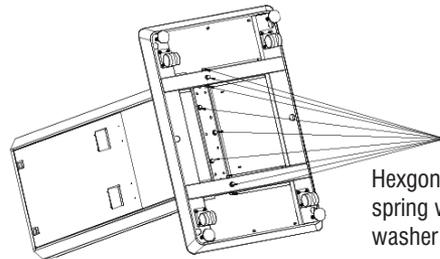

Partial view of assembly location


Hexgon bolt m8*20, M8
spring washer, M8 flat
washer (Quantity: 9PCS)

- Put M8*20 hex bolts on M8 spring washer and M8 flat washer in turn, take out the main body of the mobile bracket from the packing box and assemble with the hex wrench and M8*20 hex bolt to the base of the assembled caster and foot cup, pay attention to the direction.

■ Step-3

Hexagon bolt M8*20, M8 spring washer, M8 flat washer
(Quantity: 4PCS)

Figure C

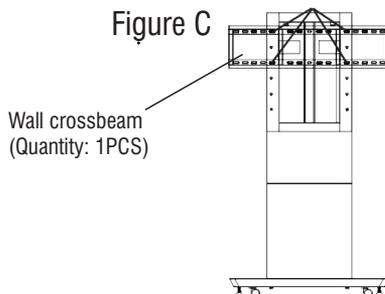


Wall crossbeam
(Quantity: 1PCS)

Use a hexagonal wrench an M8*20 bolts with spring washersand flat washers to assemble the main body of the moving bracket

■ Step-4

Figure D

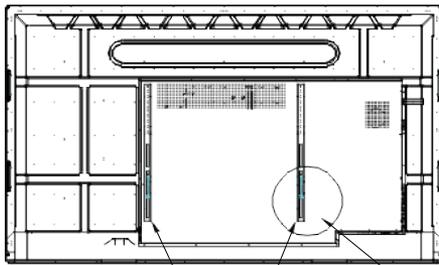

Wall vertical beam
(Quantity: 2PCS)


M5*100 screw
(Quantity: 2PCS)

Partial View
A


Rotate the M5*100 screw on the wall mounted vertical beam to the position shown in partial figure and then assemble the wall mounted vertical beam to the machine

■ Step-5

Hang the machine with the vertical beam installed, then mount it on the wall, then use a screwdriver to lock the M5*100 screws to the wall mount beam

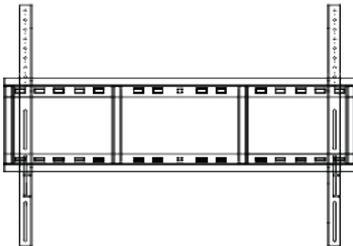

Wall bracket assembly diagram front

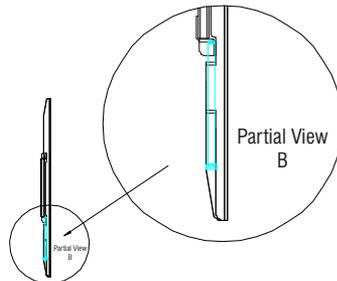

Partial View
B

Partial View
B

Please Note:

In order to correctly guide the installation of the mobile stand for the conference, please read the instructions carefully when installing

#Please entrust a professional installation company to install the mobile stand for this conference

#If you don't understand anything while reading this manual please contact us for assistance

#The illustrations in this manual are for reference only, Please refer to the actual products