



# JA0805 - Set of 3 Recycle Bins

## Sticker Application Steps

### Materials Needed

- 3 supplied vinyl stickers (Paper, Plastic & Glass, General Waste)
- 3 recycle bins
- Clean cloth
- Squeegee or credit card
- Masking tape (optional)


### Step 1. Prepare the Surface

- Clean the area of each bin where the sticker will be applied.
- Use mild soap and water to remove any dirt or dust.
- Dry thoroughly with a clean cloth.

### Step 2. Identify Each Bin

Assign each bin to a specific material:

- Blue - Paper
- Red - Plastic & Glass
- Yellow - General Waste

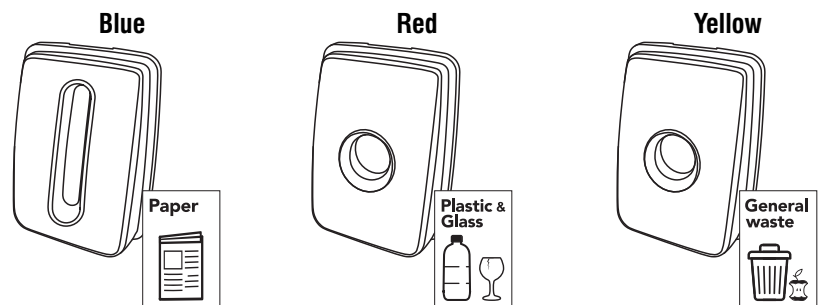


### Step 3. Position the Sticker

- Peel a small portion of the backing from the top edge of the sticker.
- Align the sticker on the bin surface.
- Use masking tape to hold it in place if needed.

### Step 4. Apply the Sticker

- Slowly peel away the backing while pressing the sticker onto the bin.
- Use a squeegee or credit card to smooth out air bubbles as you go.
- Work from the center outward.

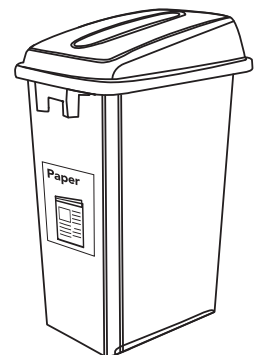

### 5. Final Touches

- Once fully applied, go over the sticker again with the squeegee to ensure full adhesion.
- Let the sticker set for at least 24 hours before exposing it to moisture or heavy use.